

Part List

- mechanical -



Xperia™ XZ
F8331, F8332 (Dual SIM)



Part List Mechanical/

CONTENTS

1 Part List 3

2 Revision History 16


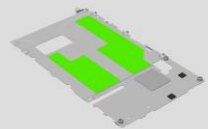 



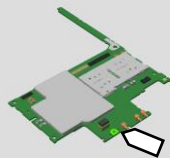 



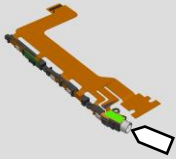 


1 Part List


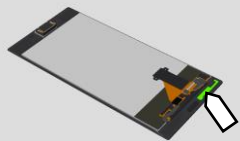 

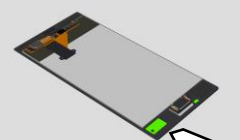 

 

 



 

 
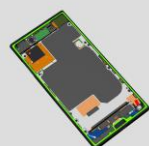 
The following parts are available for order in 'E-star'.

The 'E-star' name of a part may often be complex and even confusing, so the name of certain parts mentioned in the Working Instructions, Repair Movies and Troubleshooting Guide are often referred to by a simple descriptive name for better understanding.


Both names (designations) will in that case be included in this Part List, where the name being used in the documents mentioned above is underlined, e.g. Battery Cover.

RLC, Reversed Logistic Classification column for replaced part handling, See the Spare part handling chapter in Mechanical/Generic Repair Manual (1220-1333).





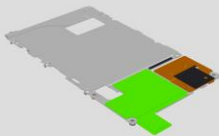 
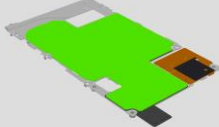 

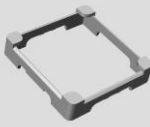 
 

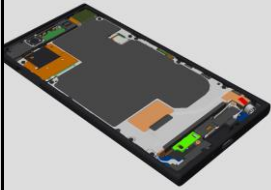 
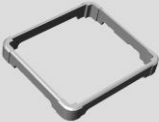 
 
Designation	Part No.	RLC	Part	Location
Adhesive Battery	1302-1761	C		
Adhesive FPC Key	1304-8721	C		
Adhesive Holder MIC 2nd	1302-1672	C		
Adhesive Key FPC Speaker	1306-2623	C		
Adhesive Key FPC Vib	1306-2622	C		
Adhesive Panel Rear Bottom	1302-1820	C		

Designation	Part No.	RLC	Part	Location
Adhesive Window Display Bottom	1302-3228	C		
Adhesive Window Display Top	1302-3227	C		
Adhesive WP Audio Jack	1294-6794	C		
Adhesive WR Holder Speaker	1302-1810	C		
Adhesive WR Speaker Bottom	1302-1690	C		 
Adhesive WR Speaker Duct	1302-1696	C		
Adhesive WR Window Display	1302-1781	C		

Designation	Part No.	RLC	Part	Location
Ant Main Assy	1301-5859	C		
Ant WLAN Assy	1301-5948	C		
Ant WLAN Main	1301-5946	C		
Battery(LIS1632ERPC)	1305-6549	C		
Cable Clip Bottom	1302-1766	C		
Cap Tray Assy (F8331) Cap Tray Assy Black Cap Tray Assy Blue Cap Tray Assy Pink Cap Tray Assy Silver (F8332) Cap Tray Assy DS Black Cap Tray Assy DS Blue Cap Tray Assy DS Pink Cap Tray Assy DS Silver	1304-9102 1304-9103 1304-9105 1304-9104 1304-9121 1304-9122 1304-9124 1304-9123	C		
Conductive tape FPC Key	1302-1427	C		


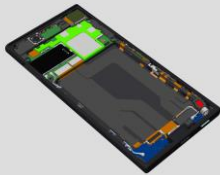 


 
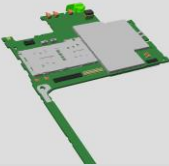 

 

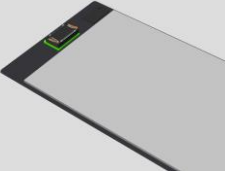 

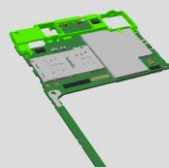 
 
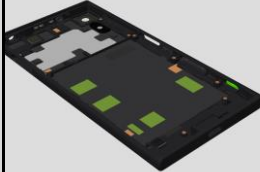 

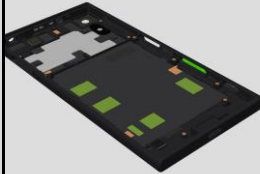 
Designation	Part No.	RLC	Part	Location
Conductive tape Relay LCD	1302-1428	C		
Cover Main Assy Cover Main Assy Black Cover Main Assy Blue Cover Main Assy Pink Cover Main Assy Silver	1302-1976 1302-1977 1302-1979 1302-1978	B		
Cushion Ant Main	1302-1697	C		
Cushion Holder MIC 1st	1302-1691	C		
Cushion Speaker	1302-1811	C		
Cushion Speaker Bottom	1305-1376	C		
Display assy Display assy Black Display assy Blue Display assy Pink Display assy Silver	1304-9084 1304-9085 1304-9087 1304-9086	A		
FICTIVE Camera 24.5M	1293-8229	B		

Designation	Part No.	RLC	Part	Location
FICTIVE Front Camera	1299-4015	B		
FP Sensor Assy	1304-9125	B		
FPC JK Module	1301-0714	C		
FPC Key Assy	1301-0718	C		
FPC NFC	1302-2331	C		
FPC Relay Assy	1306-1487	C		
Gasket Camera	1303-6959	C		
Gasket Conductive Sub Camera	1296-5855	C		

Designation	Part No.	RLC	Part	Location
Gasket Front Cam	1302-1441	C		
Gasket Volume	1303-6970	C		
Graphite Camera	1302-1759	C		
Graphite Plate Display	1302-1760	C		
Holder Bottom Assy	1302-1707	C		
Holder Front Camera	1299-7884	C		
Holder LCD BtB	1302-1805	C		
Holder Main Camera	1299-7883	C		


 

SONY

Part List Mechanical/


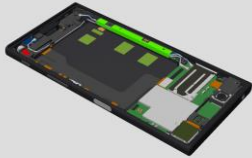 





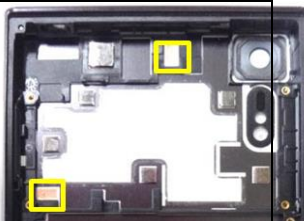 

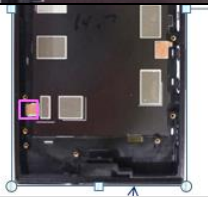 

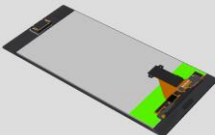 

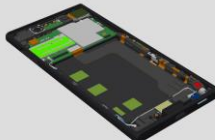 
Designation	Part No.	RLC	Part	Location
Holder Main PBA	1302-1763	C		
Holder MIC 1st Assy	1302-1700	C		
Holder MIC 2nd	1302-1671	C		
Holder Sensor	1302-1673	C		
Holder Speaker Top Assy	1302-1807	C		
Holder Top Assy	1302-1674	C		
<u>Key Camera</u> Key Camera Black Key Camera Blue Key Camera Pink Key Camera Silver	1302-1684 1302-1997 1302-1999 1302-1998	C		
<u>Key Volume</u> Key Volume Black Key Volume Blue Key Volume Pink Key Volume Silver	1302-1683 1302-1988 1302-1990 1302-1989	C		

SONY

Part List Mechanical/

Designation	Part No.	RLC	Part	Location
Label MoP	1302-4288	C		
Label NFC	1303-8384	C		
Lens Flash	1304-7680	C		
Liquid indicator	1275-3307	C		
Loudspeaker	1287-2024	C		
<u>Panel Bottom</u> Panel Bottom Black Panel Bottom Blue Panel Bottom Pink Panel Bottom Silver	1302-1816 1302-1966 1302-1968 1302-1967	C		
<u>Panel Rear Bottom</u> Panel Rear Bottom Black Panel Rear Bottom Blue Panel Rear Bottom Pink Panel Rear Bottom Silver Panel Rear Bottom Black for India Panel Rear Bottom Blue for India Panel Rear Bottom Silver for India	1302-1819 1302-1973 1302-1975 1302-1974 1305-4444 1305-4445 1305-4446	C		
<u>Panel Top</u> Panel Top Black Panel Top Blue Panel Top Pink Panel Top Silver	1302-1815 1302-1959 1302-1964 1302-1963	C		

Designation	Part No.	RLC	Part	Location
<u>PBA Ant A(F8331)</u> PBA Ant RowA <u>PBA Ant D(F8332)</u> PBA Ant RowD	1301-1180 1305-2470	C		
PBA Sub Row	1301-1220	C		
Plate BtB Battery	1303-6973	C		
Plate Display Assy	1302-1713	C		
Plate Holder Key	1302-1689	C		
Plate LCD BtB Assy	1305-6775	C		
Screw M1.4x3.0	1304-7679	C		
Screw M1.4x4.0	1302-1812	C		


 
 



Designation	Part No.	RLC	Part	Location
Sheet Battery Wlan Sub	1302-1706	C		
Sheet Conductive Vib	1302-2578	C		
Sheet CU Holder Key	1302-2579	C		
Sheet CU Panel Rear	1302-1429	C		
Sheet CU Wifi Sub	1302-2581	C		
Sheet Graphite LCD	1302-1777	C		
Sheet Guide MOP	1302-1711	C		

SONY

Part List Mechanical/

Designation	Part No.	RLC	Part	Location
Sheet Net Speaker Sheet Net Speaker Black Sheet Net Speaker Blue Sheet Net Speaker Pink Sheet Net Speaker Silver	1302-1780 1302-1956 1302-1958 1302-1957	C		
Sheet Net Speaker Top Sheet Net Speaker Top Black Sheet Net Speaker Top Blue Sheet Net Speaker Top Pink Sheet Net Speaker Top Silver	1302-3226 1302-3238 1302-3240 1302-3239	C		
Sheet PBA Ant	1302-1699	C		
Sheet PBA Sub	1302-1705	C		
Sheet PBA Sub A	1304-8725	C		
Sheet protection Plate display	1302-1803	C		
Sheet Relay USB	1304-7787	C		

Designation	Part No.	RLC	Part	Location
Sheet RF Cable Left	1302-3221	C		
Sheet Slider MOP (F8331) Sheet Slider MOP RowA (F8332) Sheet Slider MOP RowD	1302-1712 1304-9129	C		
Sheet Spacer Graphite Display	1303-8151	C		
Sheet WR MIC	1302-1445	C		 
Sheet WR Test	1302-1443	C		
Shield Camera Main	1302-1682	C		
Spacer Ant Main PBA Spring	1306-2724	C		

Designation	Part No.	RLC	Part	Location
Spacer Main PBA	1304-7678	C		
Speaker	1277-7135	C		
Thermal Gap Filler Syringe	For order: 1299-2102 For claim: 1302-7194	C		N/A
Thermal Gap Filler Tube Note! This part has an expiration date. Make sure to consume before expiration date.	For order: 1299-2101 For claim: 1302-7193	C		N/A

2 Revision History

Rev.	Date	Changes / Comments
1	2016-Sep-23	Initial release
2	2016-Nov-7	Delete (F8332) at Sheet Net Speaker Top
3	2016-Nov-14	Description change Battery → Battery(LIS1632ERPC)