

Part List

- mechanical -



Xperia XA2
H3113, H3123, H3133, H4113, H4133

CONTENTS

1 Part List 3

2 History 12

1 Part List

The following parts are available for order in 'Hybris'.

The 'Hybris' name of a part may often be complex and even confusing, so the name of certain parts mentioned in the Working Instructions, Repair Movies and Troubleshooting Guide are often referred to by a simple descriptive name for better understanding.




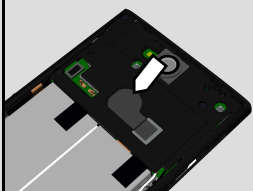 

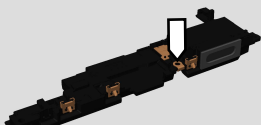 


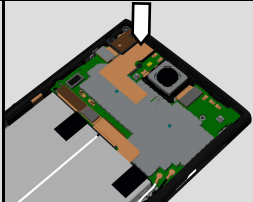 

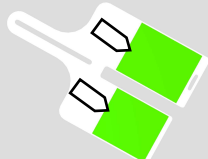 
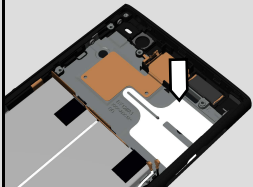 


Both names (designations) will in that case be included in this Part List, where the name being used in the documents mentioned above is underlined, e.g. Battery Cover.


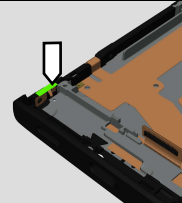 


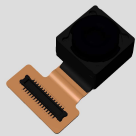 

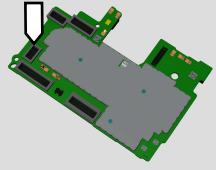 
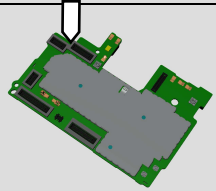 

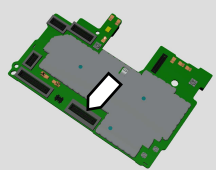 

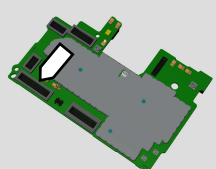 

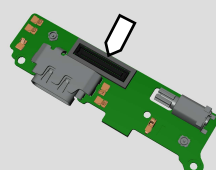 
RLC, Reversed Logistic Classification column for replaced part handling, See the Spare part handling chapter in Mechanical/Generic Repair Manual (00154064).

Designation	Part No.	RLC	Part	Location
Adhesive Battery Cover Bottom	306Q24S0700	C		
Adhesive Battery Cover Left	306Q24S0800	C		
Adhesive Battery Cover Right	306Q24S0900	C		
Adhesive Battery Cover Top	306Q24S0600	C		
Adhesive Battery Left	306Q24S0400	C		
Adhesive Battery Right	306Q24S0H00	C		


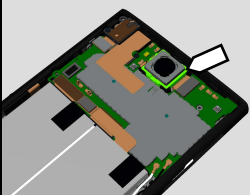 

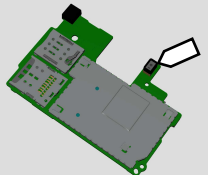 

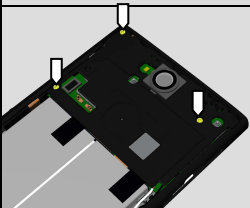 
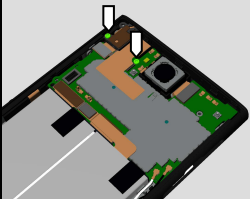 
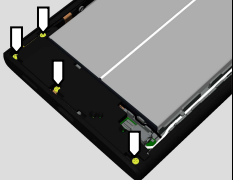 

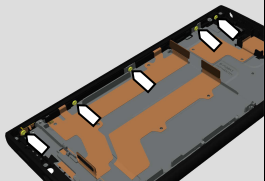 
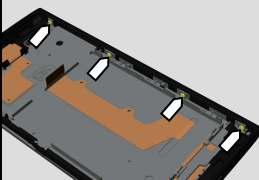 

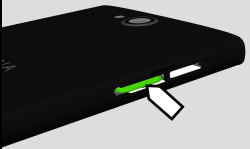 
Designation	Part No.	RLC	Part	Location
Adhesive Camera Key FPC	XXCQ100181W	C		
Adhesive Ear Speaker	306M24S0600	C		
Adhesive FP Module	XXCQ100206W	C		
Adhesive LCM Keys Side	306Q24S0300	C		
Adhesive LCM SIM/SD Side	306Q24S0200	C		
Adhesive NFC_A	XXCQ100207W	C		
Adhesive NFC_B	XXCQ100208W	C		
Adhesive Side Key FPC_B	XXCQ100285W	C		

Designation	Part No.	RLC	Part	Location
Adhesive Side Key FPC_C	XXCQ100271W	C		
Adhesive Sidekey FPC Main	XXCQ100182W	C		
Adhesive Power_Volume Key FPC	XXCQ100180W	C		
Audio Jack FPC Assy	21BY1201700	C		
Battery	1309-2682	B		
<u>Battery Cover Assy</u> Battery Cover Assy Black Battery Cover Assy Blue Battery Cover Assy Pink Battery Cover Assy Silver	78PC0300020 78PC0300030 78PC0300040 78PC0300010	B		
Bracket Main Antenna	305A24S0700	C		
Bracket Main Camera	305A24S0600	C		

Designation	Part No.	RLC	Part	Location
<u>Cap Tray SIM</u> Cap Tray SIM Black Cap Tray SIM Blue Cap Tray SIM Pink Cap Tray SIM Silver	306J24S0200 306J24S0300 306J24S0400 306J24S0100	C		
Conductive Tape Sub Antenna	306A24S0200	C		
Contact Clip Speaker Box	305524S0200	C		
Copper Foil Battery Cover	306F24S0600	C		
Copper Foil Front Camera	306F24S0800	C		
CU Label	XXKS100968W	C		
CU Label Tray	306L24S0200	C		
<u>Display Cover Assy</u> Display Cover Assy Black Display Cover Assy Blue Display Cover Assy Pink Display Cover Assy Silver	78PC0600020 78PC0600030 78PC0600040 78PC0600010	B		

Designation	Part No.	RLC	Part	Location
Ear Speaker	C/22400001600	C		
Film Bracket Main Antenna	306L24S0400	C		
FP Module Assy FP Module Assy Black FP Module Assy Blue FP Module Assy Pink FP Module Assy Silver	C/76730003600 76730003F00 C/76730003800 C/76730003300	B		
Front Camera	C/76510003100	B		
Gasket BtB FP Module	303M24S0600	C		
Gasket BTB Front Cam&AJ	303M24S0800	C		
Gasket BTB LCM	303M24S0700	C		
Gasket BTB Sidekey FPC	303M24S0500	C		
Gasket BTB Sub PBA	303M24S0400	C		

Designation	Part No.	RLC	Part	Location
<u>Key Camera</u> Key Camera Black Key Camera Blue Key Camera Pink Key Camera Silver	312524S0600 312524S0700 312524S0800 312524S0500	C		
<u>Key Power_Volume</u> Key Power_Volume Black Key Power_Volume Blue Key Power_Volume Pink Key Power_Volume Silver	312524S0200 312524S0300 312524S0400 312524S0100	C		
Main Antenna Speaker Box	22500004P00	C		
Main Camera	C/76510002300	B		
<u>Main Camera Lens Assy</u> Main Camera Lens Assy Black Main Camera Lens Assy Pink Main Camera Lens Assy Silver	78PC0400020 78PC0400030 78PC0400010	C		
NFC Antenna	2300BY12100	C		
RF Cable Black	73200001S00	C		
RF Cable White	73200001R00	C		
Rubber 2nd MIC	302A1X60600	C		

Designation	Part No.	RLC	Part	Location
Rubber Main Camera	302A24S0200	C		
Rubber PL Sensor	302A24S0100	C		
Screw Cross M1.2 L2.62	27000004P00	C		  
Screw TORX M1.4 L2.5 Silver	27000008L00	C		 
<u>SD Tray</u> SD Tray H3113/H3123/H3133	305A24S0400	C		

Designation	Part No.	RLC	Part	Location
<u>SD/SIM Tray</u> SD/SIM Tray H4113/H4133	305A24S0300	C		
<u>Side Panel Keys</u> Side Panel Keys Black Side Panel Keys Blue Side Panel Keys Pink Side Panel Keys Silver	254F24S0C00 254F24S0D00 254F24S0E00 254F24S0B00	C		
<u>Side Panel SIM/SD</u> Side Panel SIM/SD Black Side Panel SIM/SD Blue Side Panel SIM/SD Pink Side Panel SIM/SD Silver	254F24S0G00 254F24S0H00 254F24S0I00 254F24S0F00	C		
Sidekey FPC Assy	78PC0500010	B		
<u>Speaker Mesh</u> Speaker Mesh Black Speaker Mesh Blue Speaker Mesh Pink Speaker Mesh Silver	306M24S0200 306M24S0300 306M24S0400 306M24S0100	C		
Speaker Sponge	303M24S0100	C		
Sponge 1st Mic	303M24S0300	C		
Sponge Battery Connector	303M24S0D00	C		

Designation	Part No.	RLC	Part	Location
Sponge Main Camera BtB Conn	303M1X60800	C		
Sponge Notification LED	303M24S0A00	C		
Spring Antenna	305524S0300	C		
				
Sub Antenna Sub Antenna H3113/H4113 Sub Antenna H3133/H4133/H3123	23A1BY12100 23A1BY14100	C		
Sub PBA Assy Sub PBA Assy H3113/H3133/H4113/H4133 Sub PBA Assy H3123	78PC0200010 78PC1100010	B		
Water Intrusion Label	82KB600001W	C		
Water Intrusion Label Rectangle	82VY580001W	C		

2 History

Rev.	Date	Changes / Comments
1	2018-Jan-12	Initial release