

## Repair Movies - mechanical -



*Xperia™ Z4 Tablet*  
*SGP712, SGP771*

CONTENTS

1 Movies ..... 3

1.1 Disassembly ..... 3

1.2 Reassembly ..... 4

2 Revision History ..... 5

*To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.*

*For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.*

*If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow. In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.*


*For general information about repair movies, refer to 1220-1333: Generic Repair Manual - mechanical*

## 1 Movies

### 1.1 Disassembly

The disassembly is done in the following order:

1. Display Assembly
2. Holder LCD Relay BtB
3. FPC Assembly Relay LCD
4. Speaker Assy (R)
5. Speaker Assy (L)
6. Camera Main 8MPixel
7. Plate Audio Jack
8. Holder AU Jack
9. Holder AU Jack Grommet
10. FPC Assembly Audio Jack
11. Antenna WL Main
12. Antenna WL Sub
13. Frame Sub Camera
14. Camera Chat 5Mpixel
15. FPC Assembly Sensor
16. Antenna Main
17. Holder Co Axial
18. Cable RF Coax
19. FPC Assembly Relay USB
20. Holder USB Top
21. Holder USB Bottom
22. Sub PBA
23. Vibrator
24. Holder Key Sub Assembly
25. FPC Assembly Rely Key
26. Holder FPC Key
27. Adhesive Battery
28. Battery 6000.0 mAh
29. Antenna Sub
30. Holder PBA
31. Main PBA
32. Antenna NFC
33. Frame Main Assembly

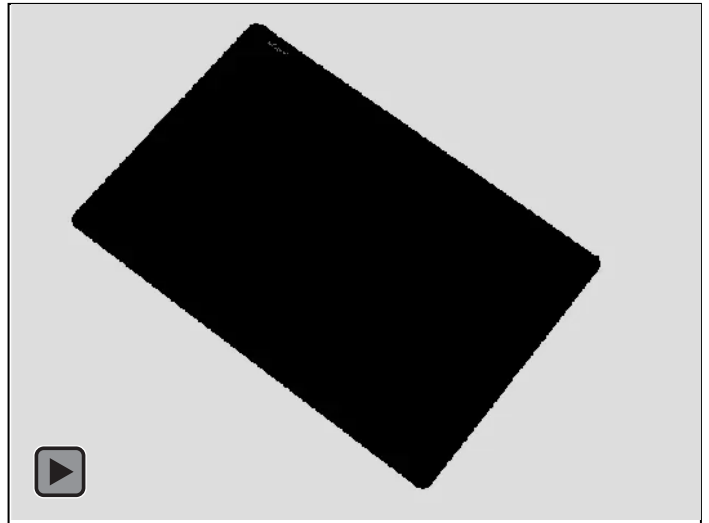


## Movies

### 1.2 Reassembly

The reassembly is done in the following order:

1. Frame Main Assembly
2. Antenna NFC
3. Main PBA
4. Holder PBA
5. Antenna Sub
6. Adhesive Battery
7. Battery 6000.0 mAh
8. Holder FKC Key
9. FPC Assembly Relay Key
10. Holder Key Sub Assembly
11. Vibrator
12. Sub PBA
13. Holder USB Top
14. Holder USB Bottom
15. FPC Assembly Relay USB
16. Holder Co Axial
17. Cable RF Coax
18. Antenna Main
19. FPC Assembly Sensor
20. Camera Chat 5 MPixel
21. Frame Sub Cam
22. Antenna WL Sub
23. Antenna WL Main
24. FPC Assembly Audio Jack
25. Holder AU Jack Grommet
26. Holder AU Jack
27. Plate Audio Jack
28. Camera Main 8 MPixel
29. Speaker Assy (L)
30. Speaker Assy (R)
31. FPC Assembly Relay LCD
32. Holder LCD Relay BtB
33. Display Assembly

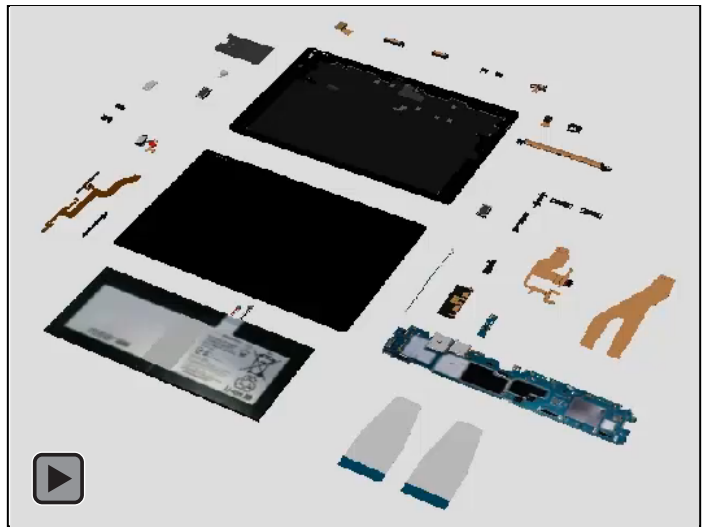



## 2 Revision History

Rev.	Date	Changes / Comments
1	2015-May-08	Initial release