



Repair Movies, Mechanical

Applicable for Z530i, Z530c, W300i, and W300c

Contents

1	Read this first!	2
2	Movies	3
2.1	Lower Portion Disassembly	3
2.2	Upper Portion Disassembly	3
2.3	Upper Portion Reassembly	4
2.4	Lower Portion Reassembly.....	4
3	Revision History	4



1 Read this first!

By clicking on the pictures with blue borders in the Movies section, the repair movies will be shown in an Internet Explorer window.


However, when running the movies on a Windows XP computer with Service Pack 2 installed, the movies become blocked each time you try to access them and will not be launched until you have accepted to unblock the content and then again confirmed the action.

To avoid this, you can adjust your computer's security settings in the following way:

- open Internet Explorer
- click Tools / Internet Options / Advanced, and scroll down until you find Security
- check the box with the text 'Allow active content to run in files on My Computer'

NOTE! Do not change this setting unless you are aware of how this will affect the security of your computer!

- After having the first movie window opened, you should adjust the size of the Internet Explorer window until it looks like the adjacent picture example.
- Furthermore, the movie can be controlled with the help of three buttons and a slider handle, as follows:
- Go to the beginning of the movie
- When running - 'Freeze' the picture
When 'frozen' - Start running from current position
- Go to the end of the movie
- Slide the handle to any wanted part of the movie
or use it as a slow motion 'scrubber'

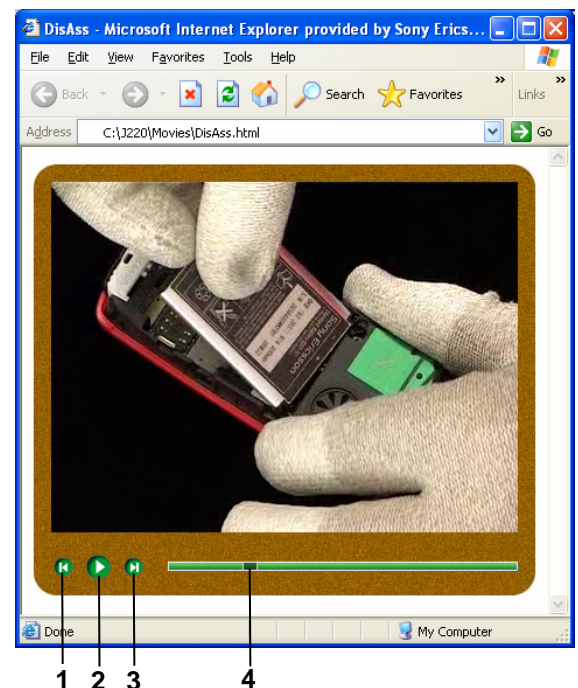

NOTE! These Repair Movies are to be regarded as a supplement to and not a substitute for the Working Instruction.

NOTE! When watching these movies you should have the Working Instruction available as well, since the Working Instruction is a document with lots of information not being included in the Repair Movies.

2 Movies

There are movies covering all of the disassembly and reassembly procedures documented in the mechanical working instructions for this product. No specific part replacements movies are available for this product due to the ease of following the written part specific procedures.

2.1 Lower Portion Disassembly

Consists of:

- Battery Cover Removal
- Battery Removal
- Rear Speaker Cover Removal
- Outer Lower Cover Removal
- Circuit Board Removal



2.2 Upper Portion Disassembly

Consists of:

- Lower Inner Cover Removal
- Style-Up Cover Removal
- Upper Inner Cover Removal
- Upper Outer Cover Removal
- LCD Removal



2.3 Upper Portion Reassembly

Consists of:

- LCD Installation
- Upper Outer Cover Installation
- Upper Inner Cover Installation
- Lower Inner Cover Installation
- Style-Up Cover Installation



2.4 Lower Portion Reassembly

Consists of:

- Circuit Board Installation
- Outer Lower Cover Installation
- Rear Speaker Cover Installation
- Battery Installation
- Battery Cover Installation



3 Revision History

Rev.	Date	Changes / Comments
A	2006-Mar-31	Initial Release
B	2006-April-27	Updated the lower portion disassembly movie
C	2006-June 20	Updated the screw descriptions in the upper and lower portion reassembly movies