

SONY

make.believe

Repair Movies - mechanical -



Xperia™ ZR

C5502, C5503, M36h

CONTENTS

1 Movies 3

1.1 Disassembly 3

1.2 Reassembly 3

2 Revision History 4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.

If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow. In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.

For general information about repair movies, refer to 1220-1333: Generic Repair Manual - mechanical

1 Movies


1.1 Disassembly

Cover Battery
Battery BA950
Sheet FPC Relay
Display
Support Plate
Camera
Main PBA
RF Coax Cable
Lightguide
Lightguide Sheet
Sheet Battery Side
Holder Side Keys
FPC Relay Assy
Cover Main Assy



1.2 Reassembly

Cover Main Assy
FPC Relay Assy
Holder Side Keys
Sheet Battery Side
Lightguide Sheet
Lightguide
RF Coax Cable
Main PBA
Camera
Support Plate
Display
Sheet FPC Relay
Battery BA950
Cover Battery

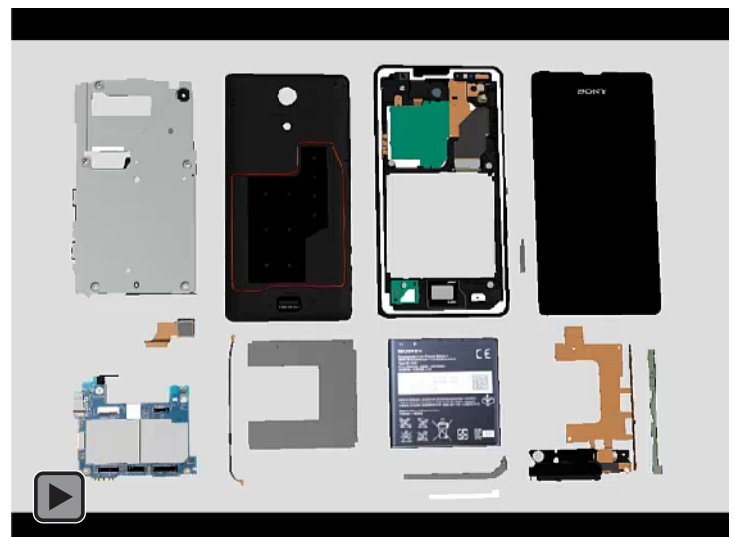

2 Revision History

Rev.	Date	Changes / Comments
1	2013-June-14	Initial release