

## Repair Movies

- mechanical -



**Xperia Z1™**

**C6902, C6903, C6906, C6943, L39h**

CONTENTS

1 Movies ..... 3

1.1 Disassembly ..... 3

1.2 Reassembly ..... 3

2 Revision History ..... 4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.

If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow. In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.

For general information about repair movies, refer to 1220-1333: Generic Repair Manual - mechanical

## 1 Movies

### 1.1 Disassembly

#### C6902, C6903, C6906, C6943, L39h

The Disassembly is done to the following modules:

- Window Back and Sheet Battery
- Rear Cover Assy
- Camera
- Shield Camera
- SIM Tray
- Battery
- Main PBA
- Loudspeaker Holder
- RF Cable A
- Main Frame Assy and Front Cover




### 1.2 Reassembly

#### C6902, C6903, C6906, C6943, L39h

The Re-assembly is done to the following modules:

- Front Cover and Main Frame Assy
- RF Cable A
- Loudspeaker Holder
- Main PBA
- Battery
- SIM Tray
- Shield Camera
- Camera
- Rear Cover Assy
- Sheet Battery
- Window Back

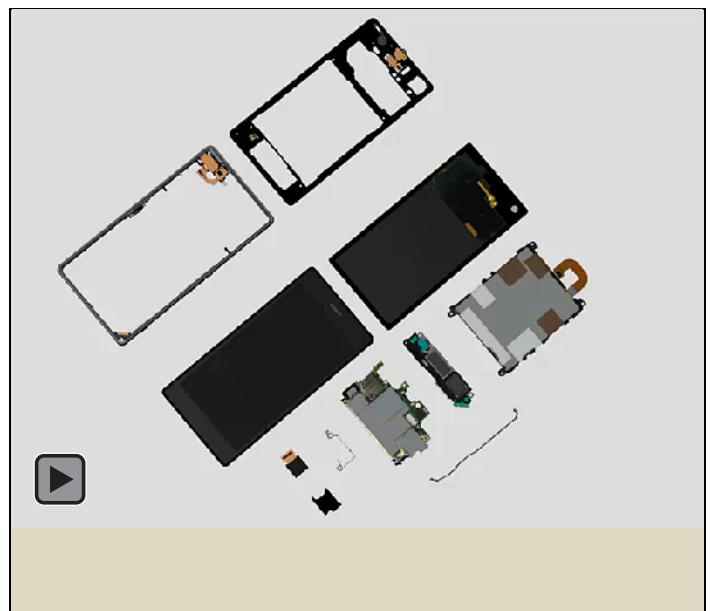

## 2 Revision History

Rev.	Date	Changes / Comments
1	2013-Sept-05	Initial release
2	2013-Sept-12	System Problem
3	2013-Nov-12	Added C6943