



Sony Ericsson

Repair Movies

- mechanical -



Txt pro, CK15i, CK15a

CONTENTS

1	Movies	3
1.1	Disassembly	3
1.1.1	Lower Unit	3
1.1.2	Upper Unit	3
1.2	Reassembly	4
1.2.1	Upper Unit	4
1.2.2	Lower Unit	4
2	Revision History	5

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.

If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow. In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.

***For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical***

1 Movies

1.1 Disassembly

1.1.1 Lower Unit

- Battery Cover
- Battery
- Keyboard
- Rear Cover Assy
- Main PBA Assy(a) and Cover Plastic(b)



1.1.2 Upper Unit

- Battery Cover
- Battery
- Front Cover Assy
- Display Shielding Assy(a) and Upper Board Assy(b)




Movies

1.2 Reassembly


1.2.1 Upper Unit

- Upper Board Assy and Display Shielding Assy
- Front Cover Assy
- Battery
- Battery Cover

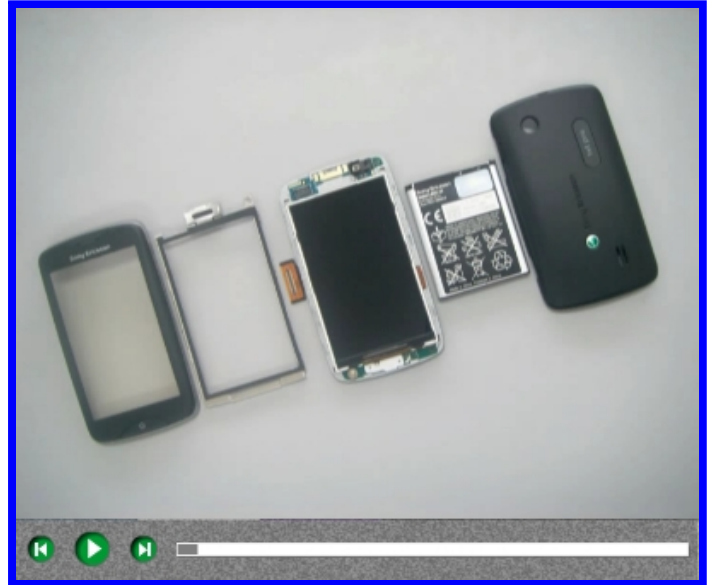

1.2.2 Lower Unit

- Main PBA Assy(a) and Cover Plastic(b)
- Rear Cover Assy
- Keyboard
- Battery
- Battery Cover

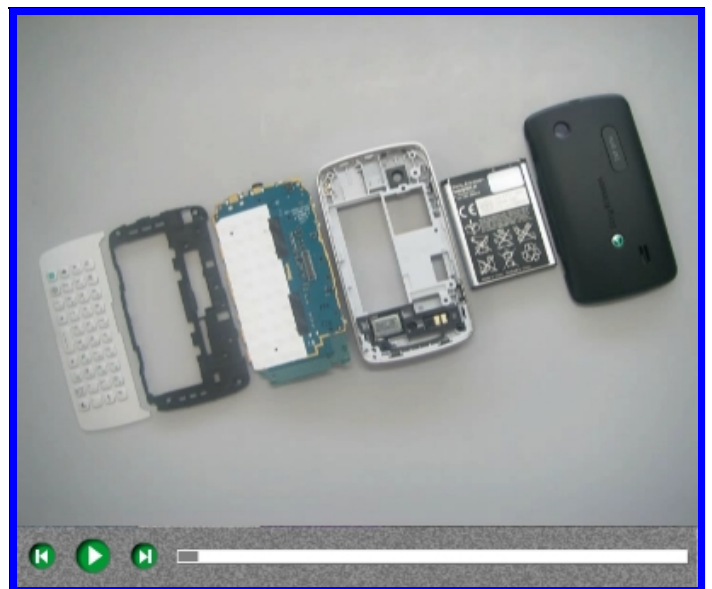



2 Revision History

Rev.	Date	Changes / Comments
1	2011-Jun-24	Initial release