



Sony Ericsson

Part List

- mechanical -



Xperia™ X10 mini

E10i, E10a



CONTENTS

 
 

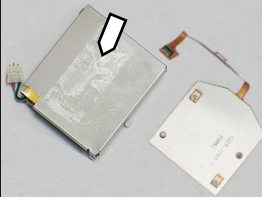 


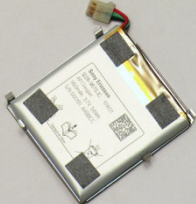 
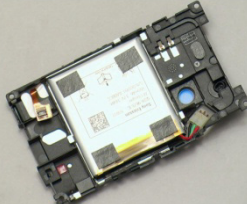 
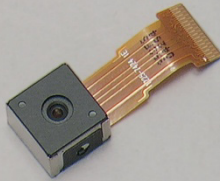 
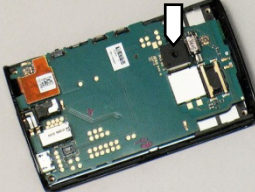 


1	Part List	3
2	Revision History	10

1 Part List

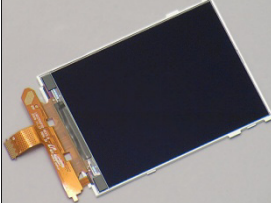 
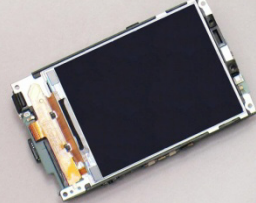 
 

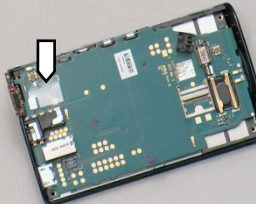 




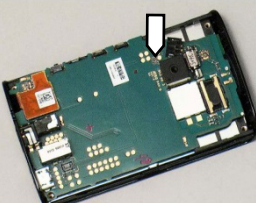 
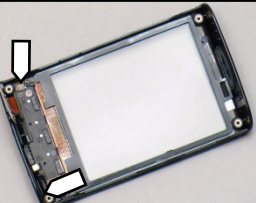 
The following parts are available for order in 'E-star'.

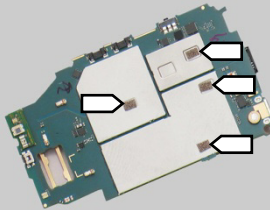 
The 'E-star' name of a part may often be complex and even confusing, so the name of certain parts mentioned in the Working Instructions, Repair Movies and Troubleshooting Guide are often referred to by a simple descriptive name for better understanding.

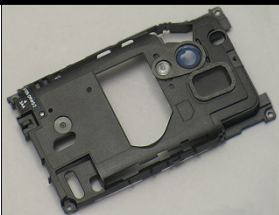 


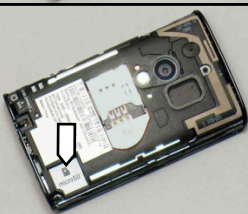 

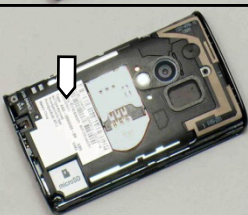 







Both names (designations) will in that case be included in this Part List, where the name being used in the documents mentioned above is underlined, e.g. Battery Cover.




 
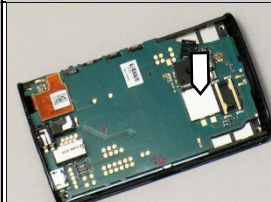 
 
 
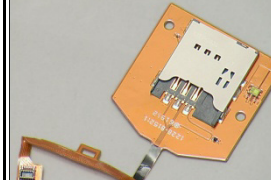 
Designation	Part No.	Part	Location
Adhesive Earspeaker	1230-2269		
Adhesive SIM FPC	1235-8092		
<u>Antenna Main</u> Antenna Main 1/8 Antenna Main 1/2/5	1239-6699 1239-6700		
<u>Battery Assy</u> Battery Assy Battery Assy Korea	1237-6653 1244-9474		
Camera 5 MPixel	1225-7424		
Cap Battery	1229-7650		

Designation	Part No.	Part	Location
Cap RF	1229-6802		
Cap USB	1227-6382		
<u>Co-Brand</u> Co-Brand Azur Co-Brand Black Co-Brand Black Movistar Co-Brand Black Orange Co-Brand Gold Co-Brand Gold Orange Co-Brand Light Pink Co-Brand Light Silver Co-Brand Lime Co-Brand Orange Co-Brand Pink Co-Brand Red Co-Brand Silver Co-Brand White Co-Brand White Movistar Co-Brand White Orange	1242-1286 1227-5443 1239-6498 1236-6138 1241-6702 1244-3062 1242-1283 1242-1284 1232-1299 1242-1285 1232-1301 1232-1303 1232-1304 1232-1302 1239-6509 1236-6141		
<u>Cover Back</u> Cover Back Azur Cover Back Black Cover Back Gold Cover Back Light Pink Cover Back Light Silver Cover Back Lime Cover Back Orange Cover Back Pink Cover Back Red Cover Back Silver Cover Back White	1242-1275 1227-5446 1241-6706 1242-1268 1242-1272 1232-1310 1242-1274 1232-1311 1232-1313 1232-1314 1232-1312		
<u>Cover Front</u> Cover Front Black Cover Front Gold	1227-5113 1241-6712		

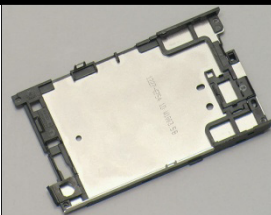 
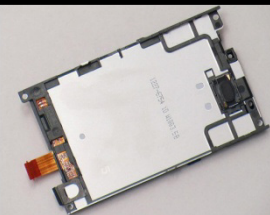 
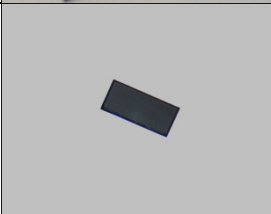 

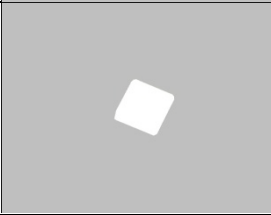 
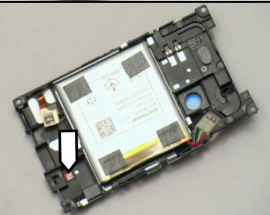 
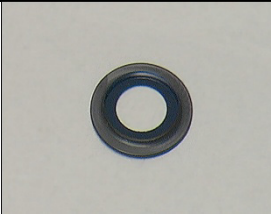 
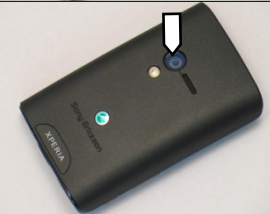 
Designation	Part No.	Part	Location
Display 2.55 TFT	1225-8165		
Ear Speaker	1219-8607		
Foil Grounding Camera	1230-4736		
Foil Insulation	1230-3985		
Gasket Camera	1227-6707		
Gasket Camera/Flash	1229-1842		
Gasket Conductive 2,0x2,0	1235-5044		
Gasket Conductive 3,1x2,0	1229-7667		

Designation	Part No.	Part	Location
Gasket Conductive 3,8x2,3	1233-2177		
Gasket Conductive 5,6x1,9	1229-7662		
Gasket Earspeaker	1227-8702		
Gasket Loudspeaker	1227-8701		
Gasket Mic	1227-7106		
Gasket Mic Channel	1227-8348		
Gasket SIM FPC	1230-0894		
Gasket Touch FPC	1230-0897		

Designation	Part No.	Part	Location
Inner Frame	1227-5395		
Label MicroSD	1233-0087		
Label Mobile Phone	1227-6777		
Mesh Back Cover	1235-3821		
MH810 Remote control headset Black	1231-6484		
<u>Micro SD Card</u> Micro SD 2Gb Micro SD 8Gb	1218-7894 1210-7835		
<u>Micro SD Memory Adapter</u> CCR-80 micro SD memory adapter, black CCR-80 micro SD memory adapter, silver	1226-9295 1226-9432		
PHF Stereo MH610, Black	1236-1423		

Designation	Part No.	Part	Location
Screw Torx 3.55x3.0 M1.4	1227-6784		
Screw Torx 3.5x3.0	1227-6788		
Screw Torx 5.2x3.0 M1.4	1229-9391		
Shield Can Lid BB	1227-4450		
Shield Can Lid Camera	1227-4456		
Shield Can Lid Radio	1227-4451		
Shield Can Lid WLAN	1227-4453		
SIM FPC	1229-1390		

Part List (mech)

Designation	Part No.	Part	Location
Support LCD	1227-6754		
Tape Water Ingress	1239-3831		
Water Indicator 3x3	1223-5172		
Window Camera	1227-6706		



2 Revision History

Rev.	Date	Changes / Comments
1	2010-May-24	Initial release
2	2010-May-26	1239-6699 replaces 1227-4996 1239-6700 replaces 1233-1569
3	2010-July-28	Added 1210-7835
4	2010-Sept-17	Added parts for Gold 1241-6702, 1241-6706 and 1241-6712
5	2010-Sept-20	Due to failure.
6	2010-Oct-18	Added new colors and battery for Korea 1242-1268, 1242-1272, 1242-1274, 1242-1275, 1242-1283, 1242-1284, 1242-1285, 1242-1286, 1242-8762, 1244-3062, 1242-8764, 1242-8765, 1242-8767, 1242-8768, 1242-8769 and 1244-9474
7	2010-Dec-13	Changed description for 1219-8607 to Ear Speaker
8	2011-Jan-24	Removed 1242-8762, 1242-8764, 1242-8765, 1242-8767, 1242-8768 and 1242-8769