

Repair Movies

- mechanical -



Xperia™ XA Ultra

F3211, F3212, F3213, F3215, F3216

CONTENTS

1	Movies	3
1.1	Disassembly	3
1.2	Reassembly	Error! Bookmark not defined.
2	Revision History	4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

**For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.**

**If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.
In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.**

**For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical**

1 Movies

1.1 Disassembly

The disassembly is done in the following order:


1. SIM Tray
2. Back Cover Assy
3. Rear Cover
4. Antenna Module
5. Side Panel Assy Keys
6. Main PBA
7. Front Cover Assy



1.2 Reassembly

The reassembly is done in the following order:

1. Front Cover Assy
2. Main PBA
3. Adhesive Side Panel Assy Keys Side
4. Side Panel Assy Keys
5. Antenna Module
6. Rear Cover
7. Back Cover Assy
8. SIM Tray

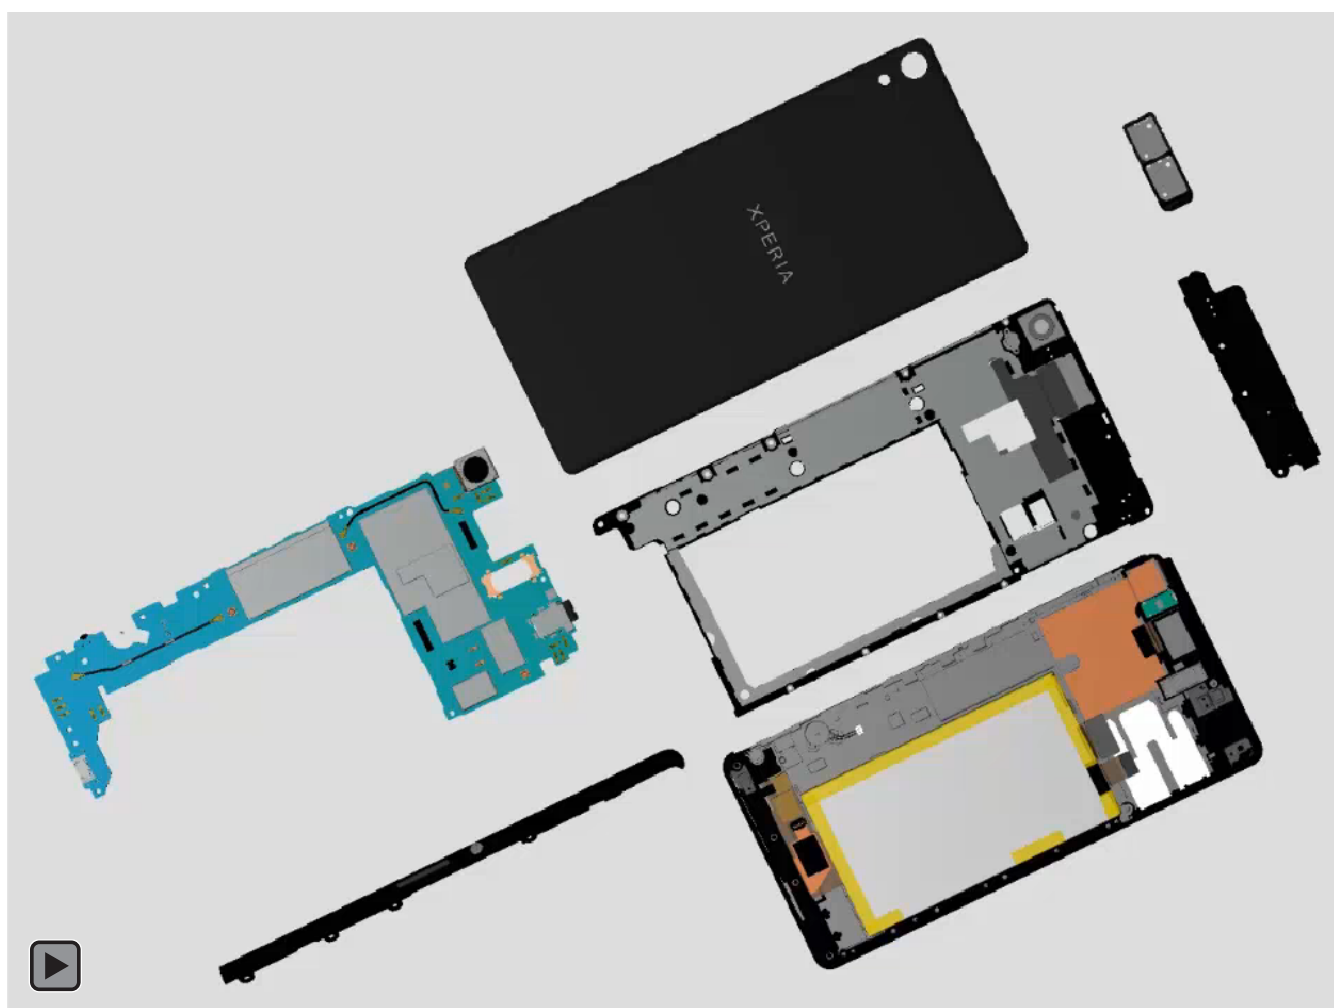

2 Revision History

Rev.	Date	Changes / Comments
1	2016-June-06	Release