

## Part List

### - mechanical -



*Xperia™ XZ1 Compact*  
**G8441**



Part List (mech)

**CONTENTS**

1 Part List ..... 3

2 Revision History ..... 12

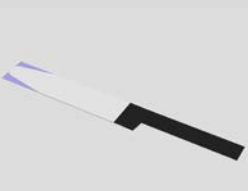 
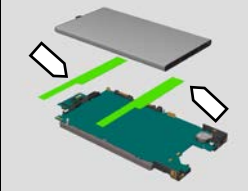 
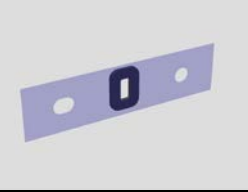 

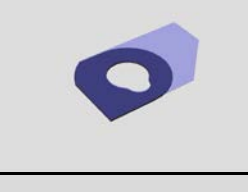 



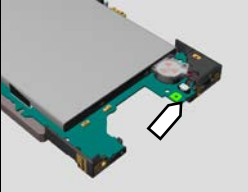 

## 1 Part List

The following parts are available for order in 'E-star'.

The 'E-star' name of a part may often be complex and even confusing, so the name of certain parts mentioned in the Working Instructions, Repair Movies and Troubleshooting Guide are often referred to by a simple descriptive name for better understanding.

 
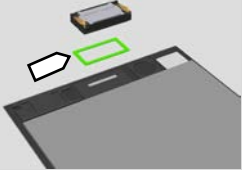 
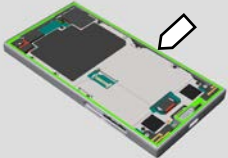 
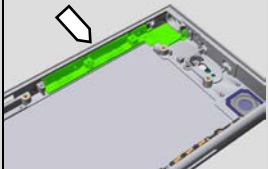 


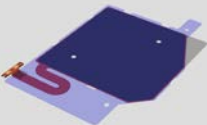 
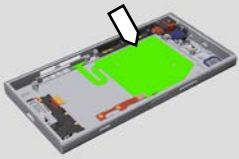 
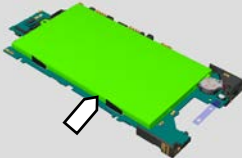 
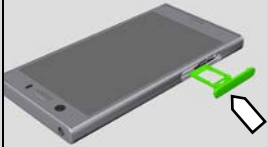 
Both names (designations) will in that case be included in this Part List, where the name being used in the documents mentioned above is underlined, e.g. Battery Cover.

RLC (Reversed Logistic Classification) column for replaced part handling, refer to the 3.4 Valid Spare Parts chapter in the Warranty Claim Instruction RE4249 about disposition of the parts.

Designation	Part No.	RLC	Part	Location
Adhesive Battery	1307-7402	C		
Adhesive Holder Mic 2nd	1307-7293	C		
Adhesive Holder Vib	1307-9059	C		
Adhesive PWB Mic	1307-7294	C		
				
Adhesive Vib	1307-7370	C		

# SONY

## Part List (mech)

Designation	Part No.	RLC	Part	Location
Adhesive WR Receiver	1307-9071	C		
Adhesive WR Window Display	1307-7425	C		
Antenna Combo LDS	1308-0833	C		
Antenna Main 1	1308-0801	C		
Antenna Main 2	1308-0816	C		
Antenna NFC	1308-1133	C		
Battery	1308-1851	C		
<u>Cap Tray Assy</u> Cap Tray Assy Black Cap Tray Assy Silver Cap Tray Assy Blue Cap Tray Assy Pink	1310-0292 1310-0293 1310-0294 1310-0295	C		

# SONY

## Part List (mech)

Designation	Part No.	RLC	Part	Location
<u>Cover Main</u> Cover Main Assy Black Cover Main Assy Silver Cover Main Assy Blue Cover Main Assy Pink	1310-0303 1310-0305 1310-0308 1310-2239	B		
Cushion FPC Key	1307-7367	C		
Cushion Front Camera	1307-7311	C		
Cushion Front Camera Inner	1307-7309	C		
Cushion Shade LED	1307-7306	C		
<u>Display</u> Display Assy Black Display Assy Silver Display Assy Blue Display Assy Pink	1310-0315 1310-0316 1310-0317 1310-2241	B		
<u>Main Camera</u> FICTIVE Main Camera	1301-9332	B		
<u>Fingerprint Sensor</u> Fingerprint Sensor Assy Black (for Black) Fingerprint Sensor Assy Silver (for Silver, Blue and Pink)	1310-0319 1310-0321	B		

Designation	Part No.	RLC	Part	Location
FPC JK Module	1307-7580	C		
FPC Key	1307-7585	C		
FPC USB	1307-7586	C		
Gasket WR Camera	1307-9057	C		
Gasket WR Volume	1307-7362	C		
Graphite Camera	1307-7401	C		
Graphite Plate Display	1307-7398	C		
Holder Audio Jack	1307-7302	C		

# SONY

## Part List (mech)

Designation	Part No.	RLC	Part	Location
Holder Battery Top	1307-9055	C		
Holder FPC Key	1307-7373	C		
Holder Front Camera	1307-7308	C		
Holder Guide Left	1307-9056	C		
Holder Key Volume	1308-0852	C		
Holder LCD BtoB	1307-7429	C		
Holder Mic 2nd	1307-7290	C		
Holder Top Rear	1307-7295	C		

# SONY

## Part List (mech)

Designation	Part No.	RLC	Part	Location
Holder USB BtoB	1307-7415	C		
Holder Vib	1307-9058	C		
<u>Key Camera</u> Key Camera Black Key Camera Silver Key Camera Blue Key Camera Pink	1309-2245 1309-2258 1309-2260 1309-2262	C		
<u>Key Volume</u> Key Volume Black Key Volume Silver Key Volume Blue Key Volume Pink	1309-2267 1309-2269 1309-2272 1309-2273	C		
Label MoP	1307-9072	C		
Liquid Indicator	1275-3307	C		
Loudspeaker	1287-2024	C		
Plate Display	1307-7391	C		



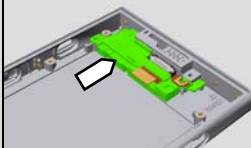 
# SONY


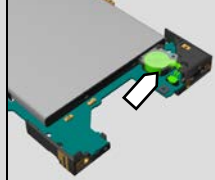 
## Part List (mech)

Designation	Part No.	RLC	Part	Location
Screw M1.2*1.6	1312-2459	C		
Screw M1.2*4.2	1294-9877	C		
Screw M1.4*3.4	1310-3626	C		
Screw M1.4*4.0	1302-1812	C		
Screw M1.4x3.8	1307-3473	C		
<u>Net Speaker Bottom</u> Sheet Net Speaker Bottom Black Sheet Net Speaker Bottom Silver Sheet Net Speaker Bottom Blue Sheet Net Speaker Bottom Pink	1307-7420 1307-7421 1307-7422 1307-7424	C		
<u>Net Speaker Top</u> Sheet Net Speaker Top Black Sheet Net Speaker Top Silver Sheet Net Speaker Top Blue Sheet Net Speaker Top Pink	1307-7416 1307-7417 1307-7418 1307-7419	C		
Sheet Slider MOP	1307-7390	C		

# SONY

## Part List (mech)

Designation	Part No.	RLC	Part	Location
Sheet vib	1307-9069	C		
Shield Main Camera	1307-7307	C		
Spacer holder 2nd Mic	1307-9054	C		
Speaker Box	1308-1282	C		
Sub Camera	1307-3095	B		
Thermal Gap Filler Syringe	<b>For order:</b> 1299-2102 <b>For claim:</b> 1302-7194	C		n/a
Thermal Gap Filler Tube <b>Note! This part has an expiration date. Make sure to consume before expiration date.</b>	<b>For order:</b> 1299-2101 <b>For claim:</b> 1302-7193	C		n/a
Tray nano SIM	1307-2513	C		

Designation	Part No.	RLC	Part	Location
Vibrator	1264-2341	C		

## 2 Revision History

Rev.	Date	Changes / Comments
1	2017-Sep-15	Initial release