

## Repair Movies

- mechanical -



*Xperia™ XZ Compact*  
**G8441**

## CONTENTS

1	Disassembly Movie .....	3
2	Reassembly Movie .....	4
3	Revision History .....	5

***To view the embedded repair movies in this document, video play back application such as Media Player is required.***

***If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.  
In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.***

## 1 Disassembly Movie

### Disassembly

The disassembly is done in the following order:

- |                       |                        |
|-----------------------|------------------------|
| 1. Cap Tray Assy      | 16. Sheet Slider MoP   |
| 2. Tray nano SIM      | 17. Holder FPC Key     |
| 3. Display            | 18. FPC Key            |
| 4. Loudspeaker        | 19. Key Camera         |
| 5. Net Speaker Top    | 20. Fingerprint Sensor |
| 6. Net Speaker Bottom | 21. Key Volume         |
| 7. Plate Display      | 22. Speaker Box        |
| 8. Sub Camera         | 23. FPC USB            |
| 9. PBA Assy           | 24. FPC JK Module      |
| 10. Main Camera       | 25. Holder Mic 2nd     |
| 11. Battery           | 26. Antenna Combo LDS  |
| 12. Antenna Main 2    | 27. Antenna NFC        |
| 13. Antenna Main 1    | 28. Cover Main         |
| 14. Vibrator          |                        |
| 15. PBA               |                        |

Double click the icon to play back the movie. →



## 2 Reassembly Movie

### Reassembly

The reassembly is done in the following order:

- |                       |                                   |
|-----------------------|-----------------------------------|
| 1. FPC USB            | 16. Battery                       |
| 2. Speaker Box        | 17. Main Camera                   |
| 3. Fingerprint Sensor | 18. PBA Assy                      |
| 4. Key Camera         | 19. Sub Camera                    |
| 5. FPC Key            | 20. Plate Display                 |
| 6. Key Volume         | 21. Net Speaker Top & Loudspeaker |
| 7. Holder FPC Key     | 22. Net Speaker Bottom            |
| 8. Antenna Combo LDS  | 23. Display                       |
| 9. Holder Mic 2nd     | 24. Tray nano SIM                 |
| 10. FPC JK Module     | 25. Cap Tray Assy                 |
| 11. Antenna NFC       |                                   |
| 12. Sheet Slider MoP  |                                   |
| 13. Vibrator          |                                   |
| 14. Antenna Main 1    |                                   |
| 15. Antenna Main 2    |                                   |

Double click the icon to play back the movie. →





## 3 Revision History

Rev.	Date	Changes / Comments
1	2017-Sep-15	Initial release