



Sony Ericsson

Repair Movies

- mechanical -



Hazel

J20, J20i

CONTENTS

1	Movies	3
1.1	Disassembly	3
1.2	Reassembly	3
2	Revision History	4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***

***If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.
In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.***

***For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical***



1 Movies


1.1 Disassembly

- Battery Cover (a) and Battery (b)
- Lower Rear Cover Frame Assy
- Main PCBA
- Lower Front Cover Assy
- Sub Keypad
- Deco Sheet
- Upper Front Cover Assy
- Sub Keyboard Assy
- Display
- .Hinge Slide (a) & Upper Rear Cover Assy (b)



1.2 Reassembly

- .Hinge Slide (a) & Upper Rear Cover Assy (b)
- Display
- Sub Keyboard Assy
- Upper Front Cover Assy
- Deco Sheet
- Sub Keypad
- Lower Front Cover Assy
- Main PCBA
- Lower Rear Cover Frame Assy
- Battery Cover (a) and Battery (b)

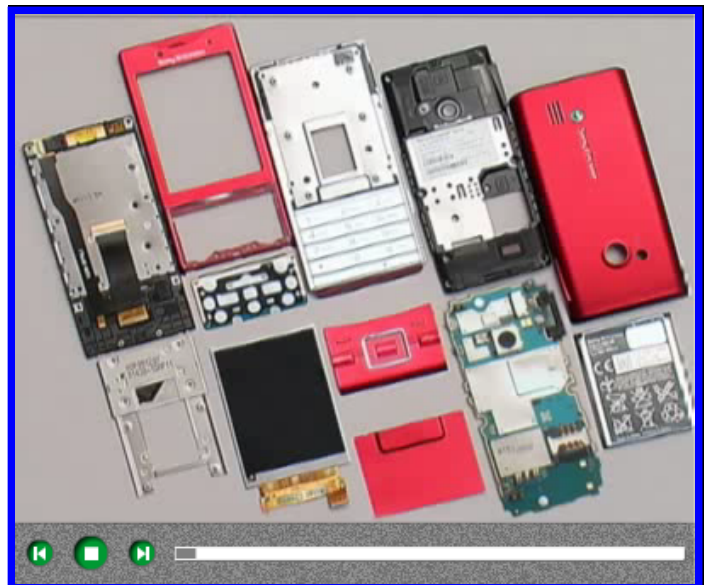



2 Revision History

Rev.	Date	Changes / Comments
1	2010-Apr-09	Initial release