



Sony Ericsson

# Repair Movies

- mechanical -



*Aspen  
M1i, M1a*

**CONTENTS**

<b>1</b>	<b>Movies .....</b>	<b>3</b>
1.1	Disassembly .....	3
1.2	Reassembly .....	3
<b>2</b>	<b>Revision History .....</b>	<b>4</b>

***To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.***

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.  
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***


***If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.  
In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.***

***For general information about repair movies, refer to  
1220-1333: Generic Repair Manual - mechanical***

# 1 Movies

## 1.1 Disassembly

1. Battery Cover
2. Battery
3. Stylus
4. Front Cover Assy
5. Rear Cover
6. LCM
7. Speaker Box Assy
8. Phone Antenna

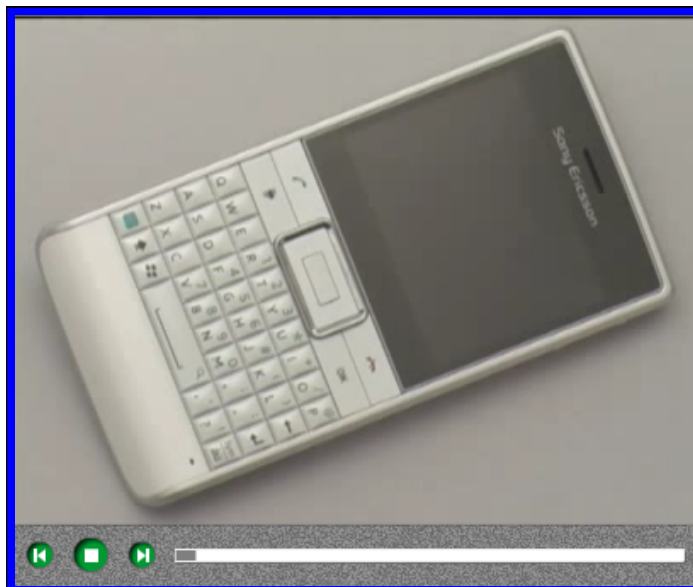

## 1.2 Reassembly

1. Phone antenna
2. Speaker Box Assy
3. LCM
4. Rear Cover
5. Front Cover Assy
6. Stylus
7. Battery
8. Battery Cover





## 2 Revision History

Rev.	Date	Changes / Comments
1	2010-Jun-14	Initial release
2	2010-Jun-22	No update