



Sony Ericsson

Repair Movies

- mechanical -



MT15i

MT15a

CONTENTS

1	Movies	3
1.1	Disassembly	3
1.2	Reassembly	3
2	Revision History	4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.

If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow. In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.

***For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical***



1 Movies

1.1 Disassembly

1. Battery Cover
2. Battery
3. Cover Right Side Panel & Cover Left Side Panel
4. Cap Touch Flex
5. Front Cover Assembly
6. Inner Frame Assembly
7. Cable Coax
8. Connector Support Assembly
9. Main PBA
10. Display
11. LCM Metal Carrier



1.2 Reassembly

1. Display
2. Main PBA
3. Connector Support Assembly
4. Cable Coax
5. Inner Frame Assembly
6. Front Cover Assembly
7. Cap Touch Flex
8. Cover Right Side Panel & Cover Left Side Panel
9. Battery
10. Battery Cover
11. LCM Metal Carrier





2 Revision History

Rev.	Date	Changes / Comments
1	2011-Mar-23	Initial release