

Repair Movies

- mechanical -



Xperia™ sola

MT27i

CONTENTS

1 Movies 3
 1.1 Disassembly 3
 1.2 Reassembly 3
2 Revision History 4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.

If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow. In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.

For general information about repair movies, refer to 1220-1333: Generic Repair Manual - mechanical

1 Movies

1.1 Disassembly

1. Cover Battery
2. Foil Battery Flex Lid
3. Lid Battery Flex
4. Cap Bottom
5. Silicone Volume/Camera
6. Inner Frame
7. Main PBA
8. Cover Front (a) & LCD support Assembly (b)



1.2 Reassembly

1. Cover Front (a) & LCD Support Assembly (b)
2. Main PBA
3. Inner Frame
4. Silicone Volume/Camera
5. Cap Bottom
6. Lid Battery Flex
7. Foil Battery Flex Lid
8. Cover Battery



2 Revision History

Rev.	Date	Changes / Comments
1	2012-May-10	Initial release
2	2012-May-18	Added instruction for the Foil Battery Flex Lid