



Sony Ericsson

Repair Movies

- mechanical -



XPERIA X10 Mini Pro
U20i, U20a,

CONTENTS

1	Movies	3
1.1	Disassembly	3
1.1.1	Lower Unit	3
1.1.2	Upper Unit	3
1.2	Reassembly	4
1.2.1	Upper Unit	4
1.2.2	Lower Unit	4
2	Revision History	5

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.

If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow. In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.

***For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical***

1 Movies

1.1 Disassembly

1.1.1 Lower Unit

- Battery Cover (a) & Battery (b)
- Keyboard
- Base Cover Middle Deco belt Assy
- Bottom Carrier Frame Assy
- PBA Assy
- Carrier Plastic Qwerty Support Assembly
- Carrier Metal Qwerty Support Assy



1.1.2 Upper Unit

- Battery Cover (a) & Battery (b)
- Front Cover Assy
- Display



Movies

1.2 Reassembly

1.2.1 Upper Unit

- Display
- Front Cover Assembly
- Battery Cover (a) & Battery (b)



1.2.2 Lower Unit

- Carrier Metal Qwerty Support Assy
- Carrier Plastic Qwerty Support Assembly
- PBA Assy
- Bottom Carrier Frame Assy
- Base Cover Middle Deco belt Assy
- Keyboard
- Battery Cover (a) & Battery (b)





2 Revision History

Rev.	Date	Changes / Comments
1	2010-June-30	Initial release
2	2010-Oct-29	Editing Front Cover Reassembly part