



Sony Ericsson

Repair Movies

- mechanical -



Vivaz Pro

U8i, U8a



CONTENTS

1	Movies	3
1.1	Disassembly	3
1.2	Reassembly	3
2	Revision History	4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***

***If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.
In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.***

***For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical***



1 Movies


1.1 Disassembly

1. Battery Cover & Battery
2. Keyboard
3. Slide Rail Cover
4. Lower Right Panel
5. Antenna Assembly
6. Camera
7. PBA SIM Flex
8. Main PBA
9. Upper Front Cover
10. Display & Hinge (Slider) Sub Assembly



1.2 Reassembly

1. Display & Hinge (Slider) Sub Assembly
2. Upper Front Cover
3. Main PBA
4. PBA SIM Flex
5. Camera
6. Antenna Assembly
7. Lower Right Panel
8. Slide Rail Cover
9. Keyboard
10. Battery Cover & Battery

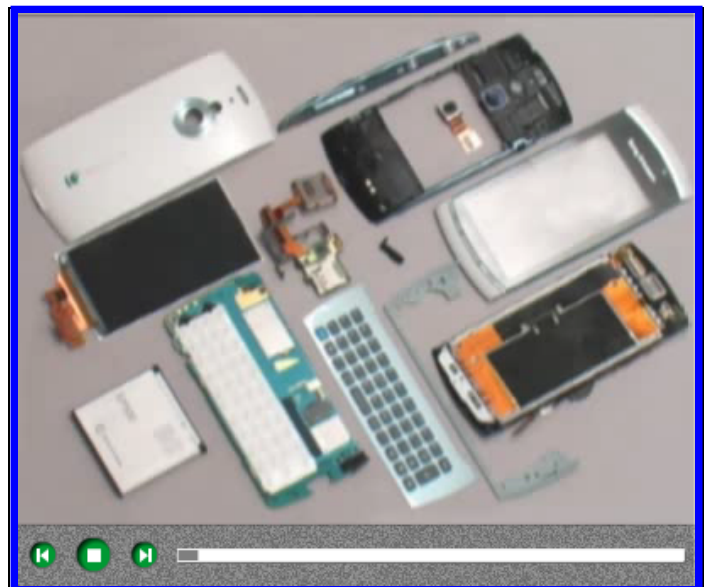



2 Revision History

Rev.	Date	Changes / Comments
1	2010-May-21	Initial release
2	2010-Sep-01	Update for the Sheet WP SIM B