

# Part List, Mechanical

Applicable for W595





## CONTENTS

<b>1</b>	<b>General .....</b>	<b>2</b>
<b>2</b>	<b>Parts .....</b>	<b>3</b>
<b>3</b>	<b>Revision History .....</b>	<b>28</b>





# 1 General

This Part List includes all parts possible to replace by using the Mechanical Repair Process.  
Parts available to order will be found in the Web Shop.

## 2 Parts

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Front Cover	Front Cover, Active Blue	1206-2770	
			Front Cover, Cosmo White	1208-7013	
			Front Cover, Ed Hardy	1228- 2746	
			Front Cover, Flower	1222-2502	
			Front Cover, Jungle Grey	1210-2756	
			Front Cover, Lava Black	1214-0276	
			Front Cover, Peachy Pink	1217-4174	
			Front Cover, Ruby Black	1211-2099	
			Front Cover, Sandy Gold	1217-4186	
			Front Cover, Silver	1228-1909	
		Front Cover	Front Cover, Dusty Blue Front Cover, Electric Grey	1208-8830 1224-1019	For W595s For W595s

## Parts *continued*







Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Walkman Sticker	Walkman Sticker, Active Blue	1222-2399	For W595s
			Walkman Sticker, Dusty Blue	1222-2422	
			Walkman Sticker, Electric Grey	1224-1029	For W595s
			Walkman Sticker, Gold	1222-2417	For Lava Black, Sandy Gold and Ed Hardy
			Walkman Sticker, Jungle Grey	1222-2415	
			Walkman Sticker, Peachy Pink	1222-2418	For Cosmo White, Flower and Ruby Black
			Walkman Sticker, Red	1222-2414	
			Walkman Sticker, Silver	1228-1913	
		Main Window	Main Window	1207-1842	



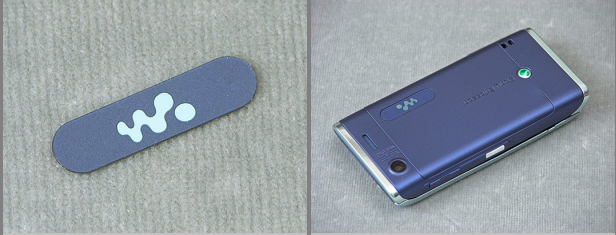 
## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Deco Plate	Decoration Plate, Active Blue	1206-6196	For W595s
			Decoration Plate, Dusty Blue	1209-8763	
			Decoration Plate, Electric Grey	1224-1022	
		Deco Plate	Decoration Plate, Gold	1213-9962	For Lava Black, Sandy Gold and Ed Hardy
			Decoration Plate, Jungle Grey	1210-2569	
			Decoration Plate, Peachy Pink	1217-5975	
		Deco Plate	Decoration Plate, Silver	1228-1958	1208-8263 and 1211-2434 are equal Use for Cosmo White, Flower and Ruby Black
			Decoration Plate, Red	1208-8263 or 1211-2434	
		Tape for Deco plate	Tape for Deco plate, Active Blue	1222-6125	For W595s
			Tape for Deco plate, Dusty Blue	1222-7874	
			Tape for Deco plate, Electric Grey	1224-1030	
		Tape for Deco plate	Tape for Deco plate, Gold	1222-6222	For Lava Black, Sandy Gold and Ed Hardy
			Tape for Deco plate, Jungle Grey	1222-6220	
			Tape for Deco plate, Peachy Pink	1222-6223	
		Tape for Deco plate	Tape for Deco plate, Red	1222-6219	For Cosmo White, Flower and Ruby Black
			Tape for Deco plate, Silver	1228-2061	

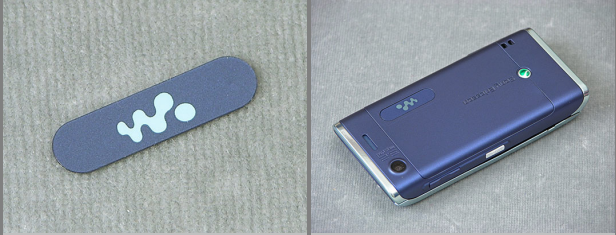 
## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
 	 	Rear Cover	Rear Cover Assy, Active Blue	1206-3481	For Ruby, Lava Black and Ed Hardy  Also for Flower For W595s For W595s
			Rear Cover Assy, Black	1211-4180	
			Rear Cover Assy, Cosmo White	1208-7904	
			Rear Cover Assy, Dusty Blue	1208-5740	
			Rear Cover Assy, Electric Grey	1224-1024	
			Rear Cover Assy, Jungle Grey	1210-2968	
			Rear Cover Assy, Peachy Pink	1217-5924	
			Rear Cover Assy, Sandy Gold	1217-5925	
			Rear Cover Assy, Silver	1228-1928	
 	 	Battery Cover	Battery Cover, Active Blue	1206-3542	For Ruby and Lava Black  For W595s The co-brand is included For W595s
			Battery Cover, Black	1211-4173	
			Battery Cover, Cosmo White	1208-7971	
			Battery Cover, Dusty Blue	1209-2676	
			Battery Cover, Ed Hardy	1228-2761	
			Battery Cover, Electric Grey	1224-1031	
			Battery Cover, Flower	1222-2506	
			Battery Cover, Jungle Grey	1210-2942	
			Battery Cover, Peachy Pink	1217-5966	
			Battery Cover, Sandy Gold	1217-5968	
			Battery Cover, Silver	1228-1935	


## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Co-Brand	Co-Brand, Active Blue	1208-8066	
			Co-Brand, Active Blue China Mobile	1214-3581	
			Co-Brand, Active Blue Hutchison	1213-9883	
			Co-Brand, Active Blue Movistar	1214-5299	
			Co-Brand, Active Blue Orange	1212-5735	
			Co-Brand, Active Blue Swisscom	1213-9885	
			Co-Brand, Active Blue T-Mobile	1213-9888	
			Co-Brand, Active Blue Virgin	1216-2600	
			Co-Brand, Active Blue Vodafone	1214-3578	
			Co-Brand, Cosmo White	1208-8261	
			Co-Brand, Cosmo White China Mobile	1214-3583	
			Co-Brand, Cosmo White Hutchison	1213-9922	
			Co-Brand, Cosmo White Movistar	1216-1670	
			Co-Brand, Cosmo White Orange	1212-5744	
			Co-Brand, Cosmo White Swisscom	1213-9894	
			Co-Brand, Cosmo White T-Mobile	1213-9890	
			Co-Brand, Cosmo White Vodafone	1214-3586	

## Parts *continued*

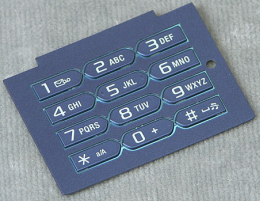 

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Co-Brand	Co-Brand, Dusty Blue	1210-0636	For W595s
			Co-Brand, Dusty Blue Orange	1211-2550	For W595s
			Co-Brand, Electric Grey Orange	1224-6553	For W595s
			Co-Brand, Jungle Grey	1210-2557	
			Co-Brand, Jungle Grey China Mobile	1214-3588	
			Co-Brand, Jungle Grey Hutchison	1213-9927	
			Co-Brand, Jungle Grey Movistar	1214-5396	
			Co-Brand, Jungle Grey Orange	1212-5740	
			Co-Brand, Jungle Grey O2	1224-2963	
			Co-Brand, Jungle Grey Swisscom	1213-9930	
			Co-Brand, Jungle Grey T-Mobile	1213-9935	
			Co-Brand, Jungle Grey Vodafone	1214-3587	

## Parts *continued*

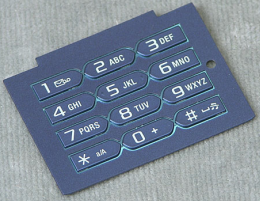 

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Co-Brand	Co-Brand, Lava Black	1213-9841	
			Co-Brand, Lava Black China Mobile	1224-8571	
			Co-Brand, Lava Black Orange	1235-9709	
			Co-Brand, Lava Black T-Mobile	1222-4553	
			Co-Brand, Peachy Pink	1217-6026	
			Co-Brand, Peachy Pink Hutchison	1222-4706	
			Co-Brand, Peachy Pink Orange	1222-4703	
			Co-Brand, Peachy Pink O2	1224-2964	
			Co-Brand, Peachy Pink T-Mobile	1223-0941	
			Co-Brand, Peachy Pink Vodafone	1222-4709	
			Co-Brand, Ruby Black	1215-3039	
			Co-Brand, Ruby Black Hutchison	1225-6331	
			Co-Brand, Ruby Black Swisscom	1213-9939	
			Co-Brand, Ruby Black Vodafone	1211-2423	
			Co-Brand, Sandy Gold	1217-6028	
			Co-Brand, Sandy Gold Hutchison	1224-7300	
			Co-Brand, Silver	1228-1966	



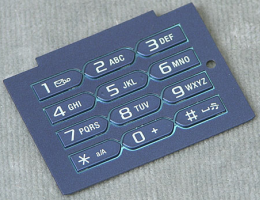 

## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
 		Keyboard Main	Keyboard Main, Latin Active Blue Keyboard Main, Latin Cosmo White Keyboard Main, Latin Dusty Blue	1206-4209 1209-8718 1209-1893	For W595s
			Keyboard Main, Latin Electric Grey Keyboard Main, Latin Jungle Grey Keyboard Main, Latin Lava Black	1224-1040 1210-4379 1213-9989	For W595s
			Keyboard Main, Latin Peachy Pink Keyboard Main, Latin Ruby Black Keyboard Main, Latin Sandy Gold Keyboard Main, Latin Silver	1217-3241 1211-2947 1217-3265 1228-1963	Also for Ed Hardy
			Keyboard Main, Arabic Active Blue Keyboard Main, Arabic Cosmo White Keyboard Main, Arabic Jungle Grey	1211-6538 1211-6564 1211-6567	
			Keyboard Main, Arabic Lava Black Keyboard Main, Arabic Peachy Pink Keyboard Main, Arabic Sandy Gold	1213-9993 1217-3243 1217-3266	

## Parts *continued*

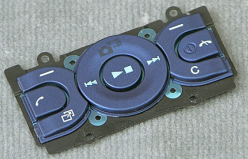 

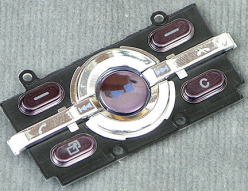 

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
 		Keyboard Main	Keyboard Main, Bobomofo Active Blue	1211-6561	
			Keyboard Main, Bobomofo Cosmo White	1211-6575	
			Keyboard Main, Bobomofo Jungle Grey	1211-6577	
			Keyboard Main, Bobomofo Lava Black	1214-0161	
			Keyboard Main, Bobomofo Peachy Pink	1217-3251	
			Keyboard Main, Cyrillic Active Blue	1211-6541	
			Keyboard Main, Cyrillic Cosmo White	1211-6568	
			Keyboard Main, Cyrillic Jungle Grey	1211-6570	
			Keyboard Main, Cyrillic Lava Black	1214-0015	
			Keyboard Main, Cyrillic Peachy Pink	1217-3244	
			Keyboard Main, Hebrew Active Blue	1211-6550	
			Keyboard Main, Hebrew Cosmo White	1211-6569	
			Keyboard Main, Hebrew Jungle Grey	1211-6572	
			Keyboard Main, Hebrew Peachy Pink	1217-3248	

## Parts *continued*





Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
 		Keyboard Main	Keyboard Main, Hindi Ruby Black	1211-6553	
			Keyboard Main, Hindi Peachy Pink	1217-3249	
			Keyboard Main, Stroke Active Blue	1211-6559	
			Keyboard Main, Stroke Cosmo White	1211-6573	
			Keyboard Main, Stroke Jungle Grey	1211-6576	
			Keyboard Main, Stroke Lava Black	1214-0159	
			Keyboard Main, Stroke Peachy Pink	1217-3250	
			Keyboard Main, Stroke Sandy Gold	1217-3270	
			Keyboard Main, Stroke Silver	1230-1982	
			Keyboard Main, Thai Active Blue	1211-6563	
			Keyboard Main, Thai Cosmo White	1211-6578	
			Keyboard Main, Thai Jungle Grey	1211-6579	
			Keyboard Main, Thai Lava Black	1214-0162	
			Keyboard Main, Thai Peachy Pink	1217-3254	





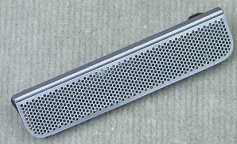 

## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Keyboard Navigation	Keyboard Navigation, Active Blue	1206-4211	Also for Ed Hardy
			Keyboard Navigation, Cosmo White	1209-8719	
			Keyboard Navigation, Jungle Grey	1210-4381	
			Keyboard Navigation, Lava Black	1214-0166	
			Keyboard Navigation, Peachy Pink	1217-3273	
			Keyboard Navigation, Ruby Black	1211-2953	
			Keyboard Navigation, Sandy Gold	1217-3276	
			Keyboard Navigation, Silver	1228-1964	
			Keyboard Navig, Active Blue Orange	1213-7841	Without camera icon
			Keyboard Navig, Cosmo White Orange	1213-7844	Without camera icon
			Keyboard Navig, Jungle Grey Orange	1213-7843	Without camera icon
			Keyboard Navig, Peachy Pink Orange	1222-4176	Without camera icon
		Keyboard Navigation	Keyboard Navigation, Dusty Blue	1209-2719	For W595s
			Keyboard Navigation, Electric Grey	1224-1041	For W595s
			Keyboard Navig, Dusty Blue Orange	1211-7841	For W595s
			Keyboard Navig, Electric Grey Orange	1224-4700	Without camera icon





## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Volume Key	Volume Key, Active Blue	1206-4204	For Ruby, Lava Black and Ed Hardy
			Volume Key, Black	1211-2904	
			Volume Key, Cosmo White	1209-8717	
			Volume Key, Dusty Blue	1209-8716	For W595s
			Volume Key, Electric Grey	1224-1043	For W595s
			Volume Key, Jungle Grey	1210-4353	
			Volume Key, Peachy Pink	1217-3277	
			Volume Key, Sandy Gold	1217-3279	
			Volume Key, Silver	1228-1965	
		Walkman Key	Walkman Key	1206-4202	All phone colors except Peachy Pink and Sandy Gold
			Walkman Key, Peachy Pink	1218-0137	
			Walkman Key, Sandy Gold	1218-0140	

## Parts *continued*

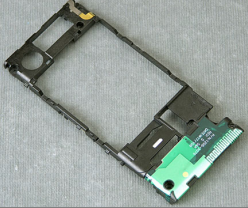 




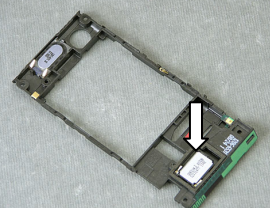 


Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Cap Bottom	Cap Bottom Assy, Active Blue	1206-3534	
			Cap Bottom Assy, Cosmo White	1208-7880	
			Cap Bottom Assy, Ed Hardy	1228-2757	
			Cap Bottom Assy, Jungle Grey	1210-2961	
			Cap Bottom Assy, Lava Black	1214-0194	
			Cap Bottom Assy, Peachy Pink	1217-5946	
			Cap Bottom Assy, Ruby Black	1211-4192	
			Cap Bottom Assy, Sandy Gold	1217-5956	
			Cap Bottom Assy, Silver	1228-1952	
		Cap Bottom	Cap Bottom Assy, Dusty Blue	1209-2651	For W595s
			Cap Bottom Assy, Electric Grey	1224-1036	For W595s

## Parts *continued*





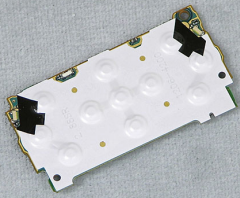 


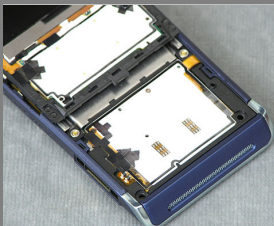 
Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Cap Top	Cap Top Assy, Active Blue	1206-3522	
			Cap Top Assy, Cosmo White	1208-7850	
			Cap Top Assy, Ed Hardy	1228-2755	
			Cap Top Assy, Jungle Grey	1210-2946	
			Cap Top Assy, Lava Black	1214-0190	
			Cap Top Assy, Peachy Pink	1217-5932	
			Cap Top Assy, Ruby Black	1211-4174	
			Cap Top Assy, Sandy Gold	1217-5933	
			Cap Top Assy, Silver	1228-1948	
		Cap Top	Cap Top Assy, Dusty Blue	1209-2621	For W595s
			Cap Top Assy, Electric Grey	1224-1034	For W595s



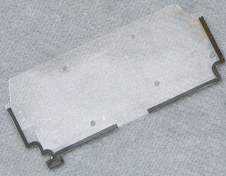 
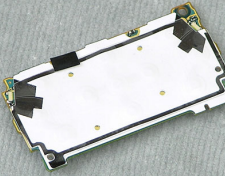 
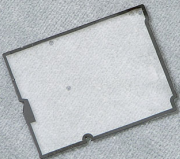 
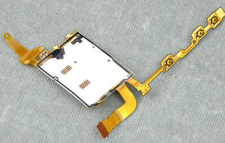 

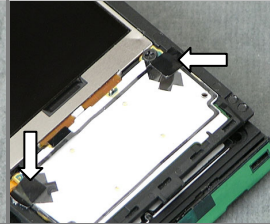 

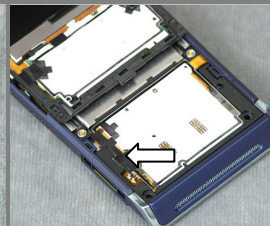 
## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Frame Assy	Frame Assy	1206-6531	
		Loudspeaker 9x18	Loudspeaker 9x18	1207-0091	
		Loudspeaker 11x15	Loudspeaker 11x15	RLE90847	
		Liquid Indicator	Liquid Indicator	1210-3726	

## Parts *continued*

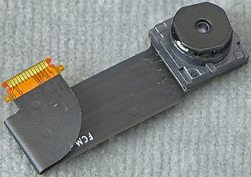 


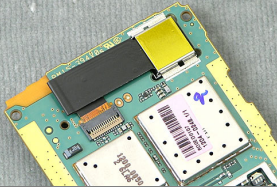 
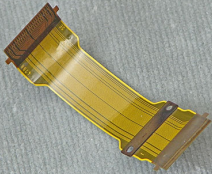 
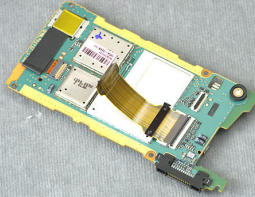 
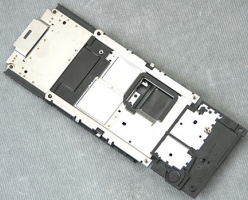 
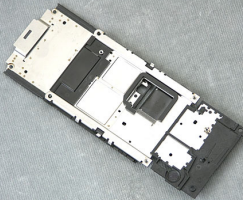 
Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Display	Display 2.2 TFT	1212-7855	
		Earspeaker FPC	Earspeaker FPC	1206-4790	
		PBA Navigation	PBA Navigation	1212-4356	
		PBA Main Keyboard FPC	PBA Main Keyboard FPC	1206-4188	

## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Light Guide Navi Keyboard	Light Guide Navi Keyboard	1206-4196	
		Light Guide Main Keyboard	Light Guide Main Keyboard	1206-4190	
		Tape Navigation LED	Tape Navigation LED	1212-6129	
		Tape Main Keyboard LED	Tape Main Keyboard LED	1210-0708	


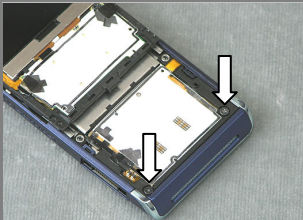 
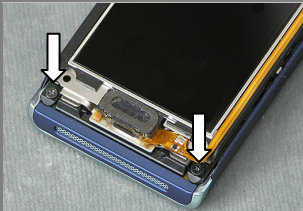 



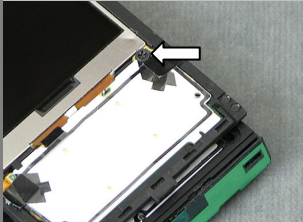 


## Parts *continued*

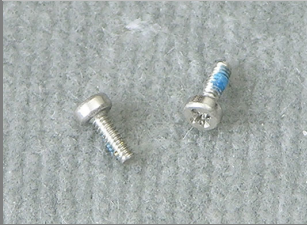 
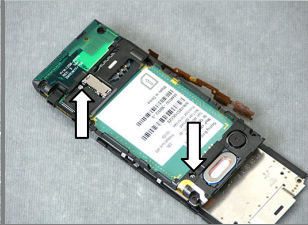 

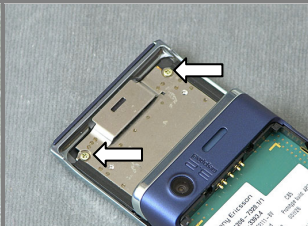 



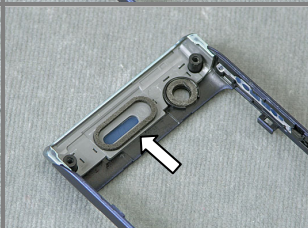 
Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Camera Assy	Camera Assy	1210-9667	
		Shield Can Lid Camera	Shield Can Lid Camera	1206-5455	
		Half to Half FPC	Half to Half FPC	1206-4788	
		Hinge	Hinge	1206-7574	



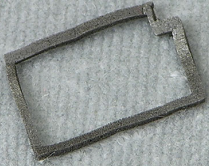 
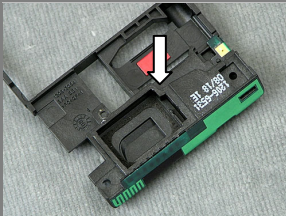 

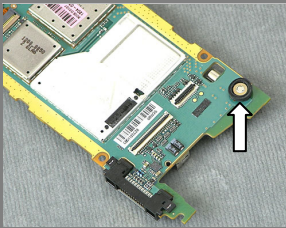 
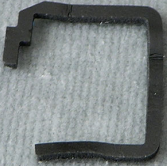 
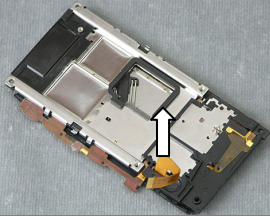 

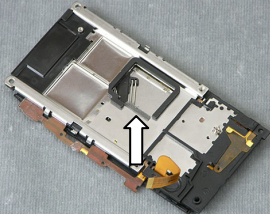 
## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Screw Ph 1.6 x 6.5	Screw Ph 1.6 x 6.5	1206-6885	
					
		Screw Ph 1.6 x 3.0	Screw Ph 1.6 x 3.0	1206-6889	
		Screw Ph 1.4 x 1.6	Screw Ph 1.4 x 1.6	1210-6285	

## Parts *continued*


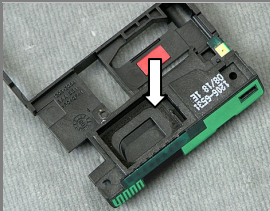 

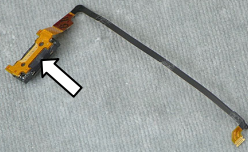 

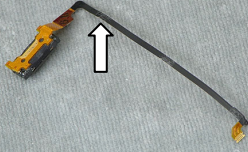 
 
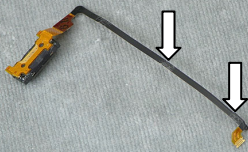 
Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Screw Ph 1.2 x 3.4	Screw Ph 1.2 x 3.4	1206-6886	
		Screw Ph 1.4 x 2.1	Screw Ph 1.4 x 2.1	1206-6961	
		Gasket Camera	Gasket Camera	1206-3517	
		Gasket Speaker Top	Gasket Speaker Top	1207-3442	

## Parts *continued*




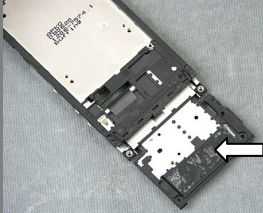 



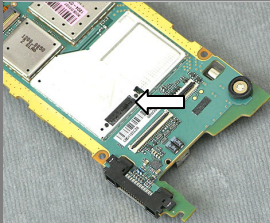 
Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Gasket Speaker Bottom	Gasket Speaker Bottom	1206-6545	
		Gasket Microphone	Gasket Microphone	1206-5815	
		Gasket Hinge	Gasket Hinge	1207-1165	
		Dust Gasket Hinge	Dust Gasket Hinge	1207-1167	




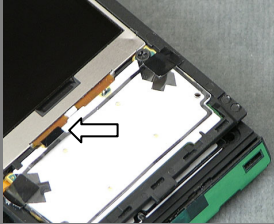 

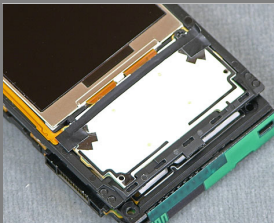 




## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Adhesive Speaker Bottom	Adhesive Speaker Bottom	1206-6546	
		Adhesive Earspeaker	Adhesive Earspeaker	1207-7657	
		Adhesive Earsp FPC Top	Adhesive Earsp FPC Top	1207-7627	
		Adhesive Earsp FPC Bottom	Adhesive Earsp FPC Bottom	1208-5489	



## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Adhesive Navigation PBA	Adhesive Navigation PBA	1207-1173	
		Adhesive Main Keyboard	Adhesive Main Keyboard	1207-2232	
		Adhesive Sidekey FPC	Adhesive Sidekey FPC	1216-1097	
		Adhesive HtH	Adhesive HtH	1207-2220	

## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Tape Navi Key LED middle	Tape Navi Key LED middle	1210-0722	Version 1
					Version 2
		Memory Stick	Memory Stick 2GB M2 Memcard 4Gbyte 40.0MHz 1.8V M2	KDR109171/2048 1206-0351	
		Label Core Unit	Label Core Unit	1207-0366	

## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
			HPM-64/D Mic/Connector to Earphones	1212-1202	Mic and Earphones makes a complete headset.
			HPM-64 Earphones Active Blue HPM-64 Earphones Cosmopolitan HPM-64 Earphones Dusty Blue HPM-64 Earphones Jungle Green HPM-64 Earphones Orange Black HPM-64 Earphones Peachy Pink HPM-64 Earphones Ruby Red HPM-64 Earphones Silver	1214-4189 1214-4217 1214-4225 1214-4218 1214-4222 1221-0067 1214-4224 1207-6840	Mic and Earphones makes a complete headset.



### 3 Revision History

Rev.	Date	Changes / Comments
1	2008-09-26	First release
2	2008-10-10	Added 1211-6538, 1211-6561, 1211-6564, 1211-6575, 1211-6576, 1211-6577, 1213-9989 and 1210-0722
3	2008-10-17	Added 1211-6563, 1211-6563 and 1211-6579
4	2008-10-24	Added 1216-2600
5	2008-11-13	Removed 1216-2681
6	2008-11-24	Added KDR109171/2048
7	2009-01-24	Added parts for Peachy Pink 1217-3241, 1217-3243, 1217-3244, 1217-3248, 1217-3249, 1217-3250, 1217-3251, 1217-3254, 1217-3273, 1217-3277, 1217-4174, 1217-5924, 1217-5932, 1217-5946, 1217-5966, 1217-5975, 1217-6026, 1218-0137, 1222-4176, 1222-4703, 1222-4706 and 1223-0941
8	2009-01-29	Added parts for Flower 1222-2502 and 1222-2506
9	2009-02-24	Added 1206-0351, 1214-0161, 1216-2609 and 1216-2612
10	2009-03-24	Added 1210-0722 ver 2, 1222-2399, 1222-2414, 1222-2415, 1222-2417, 1222-2418 and 1222-2422 Added parts for Sandy Gold 1217-3265, 1217-3276, 1217-3279, 1217-4186, 1217-5925, 1217-5933, 1217-5956, 1217-5968, 1217-6028 and 1218-0140 Removed 1211-2434 (use 1208-8263 instead)



Rev.	Date	Changes / Comments
11	2009-04-02	Added 1214-0159. Removed 1216-2609 and 1216-2612
12	2009-05-02	Added parts for Electric Grey 1224-1019, 1224-1022, 1224-1024, 1224-1029, 1224-1031, 1224-1034, 1224-1036, 1224-1040, 1224-1041, 1224-1043, 1224-4700 and 1224-6553  Changed description for 1207-0091 and RLE90847
13	2009-05-22	Added 1213-9993, 1214-0015, 1214-0162, 1214-3586, 1224-7300 and 1224-8571
14	2009-06-03	Added 1212-5740, 1212-5744, 1217-3266, 1222-4553, 1222-4709, 1224-2963, 1224-2964, 1225-6331
15	2009-06-09	Added 1211-2434
16	2009-07-07	Added 1222-6125, 1222-7874, 1224-1030, 1222-6222, 1222-6220, 1222-6223 and 1222-6219
17	2009-07-30	Added parts for Ed Hardy 1228- 2746, 1228- 2755, 1228- 2757 and 1228- 2761
18	2009-08-21	Added 1207-6840, 1221-0067 and 1226-0119
19	2009-08-26	Removed 1226-0119. Use 1207-6840.
20	2009-08-27	Added parts for Silver 1228-1909, 1228-1913, 1228-1928, 1228-1935, 1228-1948, 1228-1952, 1228-1958, 1228-1963, 1228-1964, 1228-1965, 1228-1966, 1228-2061 and 1230-1982
21	2009-10-15	Added 1217-3270
22	2010-06-28	Added 1235-9709