



Sony Ericsson

---

# Repair Movies

## - mechanical -



*Mix, WT13i*

## CONTENTS

<b>1</b>	<b>Movies .....</b>	<b>3</b>
1.1	Disassembly .....	3
1.2	Reassembly .....	3
<b>2</b>	<b>Revision History .....</b>	<b>4</b>

***To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.***

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***

***If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow. In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.***

***For general information about repair movies, refer to  
1220-1333: Generic Repair Manual - mechanical***

# 1 Movies


## 1.1 Disassembly

- Battery Cover
- Battery
- Band
- Rear Cover Assy
- Front Cover Assy
- Mylar Connector
- Display (a) and Main PBA (b)



## 1.2 Reassembly

- Main PBA (a) and Display (b)
- Mylar Connector
- Front Cover Assy
- Rear Cover Assy
- Band
- Battery
- Battery Cover

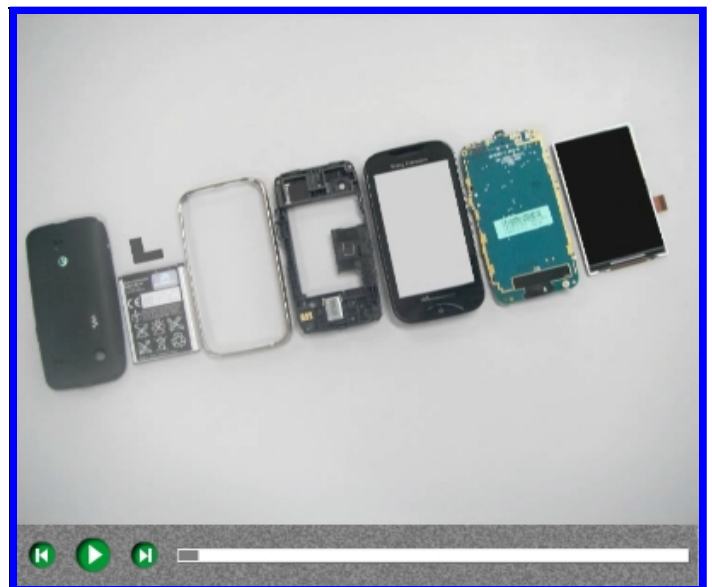



## 2 Revision History

Rev.	Date	Changes / Comments
1	2011-Aug-05	Initial release