



Go/No Go Test Script Specification, Electrical

Applicable for Z250a, Z250i, Z320a, Z320i

Contents

1 ... General.....	3
1.1 About This Document.....	3
1.2 Script Requirements.....	3
1.3 Channel Allocation Table	4
1.4 Power Level Allocation Table	4
1.5 Test Limits	4
1.6 Attenuation Factors.....	5
1.7 Scripts	5
2 ... Z250i/Z320i Test Sequence using an RF Shield Box and Coupler	5
2.1 Initializing and Call Setup	5
2.2 Audio Loopback	7
2.3 Measurement Group ALLMEAS LCH 900.....	7
2.4 Measurement Group ALLMEAS MCH 900.....	7
2.5 Measurement Group ALLMEAS HCH 900	8
2.6 Measurement Group ALLMEAS LCH 1800.....	8
2.7 Measurement Group ALLMEAS MCH 1800.....	9
2.8 Measurement Group ALLMEAS HCH 1800	9
2.9 Measurement Group ALLMEAS LCH 1900.....	10
2.10 Measurement Group ALLMEAS MCH 1900.....	10
2.11 Measurement Group ALLMEAS HCH 1900	11
3 ... Z250i/Z320i Test Sequence using a Direct Line Connection.....	12
3.1 Initializing and Call Setup	12
3.2 Audio Loopback	13
3.3 Measurement Group ALLMEAS LCH 900.....	13
3.4 Measurement Group ALLMEAS MCH 900.....	13
3.5 Measurement Group ALLMEAS HCH 900	14
3.6 Measurement Group ALLMEAS LCH 1800.....	14
3.7 Measurement Group ALLMEAS MCH 1800.....	15
3.8 Measurement Group ALLMEAS HCH 1800	15
3.9 Measurement Group ALLMEAS LCH 1900.....	16
3.10 Measurement Group ALLMEAS MCH 1900.....	16
3.11 Measurement Group ALLMEAS HCH 1900	17
4 ... Z250a/Z320a Test Sequence using an RF Shield Box and Coupler.....	17
4.1 Initializing and Call Setup	17
4.2 Audio Loopback	19
4.3 Measurement Group ALLMEAS LCH 850.....	19
4.4 Measurement Group ALLMEAS MCH 850.....	19
4.5 Measurement Group ALLMEAS HCH 850	20
4.6 Measurement Group ALLMEAS LCH 1900.....	20



4.7	Measurement Group ALLMEAS MCH 1900.....	21
4.8	Measurement Group ALLMEAS HCH 1900	21
4.9	Measurement Group ALLMEAS LCH 1800.....	22
4.10	Measurement Group ALLMEAS MCH 1800.....	22
4.11	Measurement Group ALLMEAS HCH 1800	23
5 ...	Z250a/Z320a Test Sequence using a Direct Line Connection	24
5.1	Initializing and Call Setup	24
5.2	Audio Loopback	25
5.3	Measurement Group ALLMEAS LCH 850.....	25
5.4	Measurement Group ALLMEAS MCH 850.....	25
5.5	Measurement Group ALLMEAS HCH 850	26
5.6	Measurement Group ALLMEAS LCH 1900.....	26
5.7	Measurement Group ALLMEAS MCH 1900.....	27
5.8	Measurement Group ALLMEAS HCH 1900	27
5.9	Measurement Group ALLMEAS LCH 1800.....	28
5.10	Measurement Group ALLMEAS MCH 1800.....	28
5.11	Measurement Group ALLMEAS HCH 1800	29
6 ...	Attenuation Factors	30
6.1	Z250i Loss Values for the Rohde & Schwarz RF Shield Box and Coupler	30
6.2	Z250a Loss Values for the Rohde & Schwarz RF Shield Box and Coupler ...	31
6.3	Z250i/Z250a Loss Values for a Direct Line Connection.....	31
6.4	Z320i Loss Values for the Rohde & Schwarz RF Shield Box and Coupler	32
6.5	Z320a Loss Values for the Rohde & Schwarz RF Shield Box and Coupler ...	33
6.6	Z320a/Z320i Loss Values for a Direct Line Connection.....	33
7 ...	Revision history	34



1 General

1.1 About This Document

This document contains the test requirements for a GSM tri-band (900/1800/1900 and 850/1800/1900) pocket transceivers using an antenna coupler or direct line connection. These test sequences should be used as an arrival and verification test of radio functionality.

Tests are done in signaling mode, i.e. a call has been established to the test instrument. The test instrument controls the transceiver unit. RF performance is measured with an antenna coupler or the direct line connection, whichever method is selected.

1.2 Script Requirements

- The test should be designed so those users with little or no system expertise can perform accurate testing.
- The measurements should run automatically, though a certain amount of manual work is included (and mandatory), such as MS call setup (i.e. dialling number).
- It should be possible to print or store the measurement results.
- It should be possible to change the channels used in testing due to possible local radio interference. The ranges for these settings are specified under the *Channel Allocation Table*.
- All functions and settings should be protected in such a manner that the end-user cannot directly change them. (For example, a password or encrypted settings file.)
- The attenuation factors that should be used are stated in section 6. The test instrument must be capable of using different attenuation factors for RX and TX. It must also be possible to use various attenuation factors for different channels in each band.

NOTE! **Any setups other than the one stated in this document must be discussed and exempted by Sony Ericsson to be approved.**

1.3 Channel Allocation Table

Band	Ch definition	Any ARFCN of:
GSM850	Low	128-132
GSM850	Mid	187-191
GSM850	High	247-251
GSM900	Low	975-979
GSM900	Mid	36-40
GSM900	High	120-124
GSM 1800	Low	512-516
GSM 1800	Mid	697-701
GSM 1800	High	881-885
GSM1900	Low	512-516
GSM1900	Mid	658-662
GSM1900	High	806-810

1.4 Power Level Allocation Table

Band	PL definition	Powerlevel (PL)
GSM850	Lowest	19
GSM850	Mid	12
GSM850	Highest	7
GSM900	Lowest	19
GSM900	Mid	12
GSM900	Highest	5
GSM1800/1900	Lowest	15
GSM1800/1900	Mid	8
GSM1800/1900	Highest	0

1.5 Test Limits

The test limits for each measurement are specified in the Sequence Tables.

1. Since the coupler introduces higher measurement inaccuracy, some measurements may have wider limits than stated in the GSM specifications.
2. The direct line connection limits conform to the phase 2 GSM specification.

1.6 Attenuation Factors

The different scripts must be configured with the correct attenuation factors and named after the product that they are designed to test. The attenuation factors to be used are stated in section 6.

1.7 Scripts

General scripts for the different system/system combinations may be developed. No hand-over is necessary if not stated, however, Sony Ericsson mobiles are capable of hand-over between GSM900/1800, GSM850/1900 and might therefore be used to decrease test time.

2 Z250i/Z320i Test Sequence using an RF Shield Box and Coupler


2.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Mid	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 900	



2.1.1 Sequence

1. Initialize instrument
2. Insert a test SIM and attach a fully charged standard battery to the mobile (install battery cover before testing). It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results.
3. Position the mobile in the coupler according to the picture.

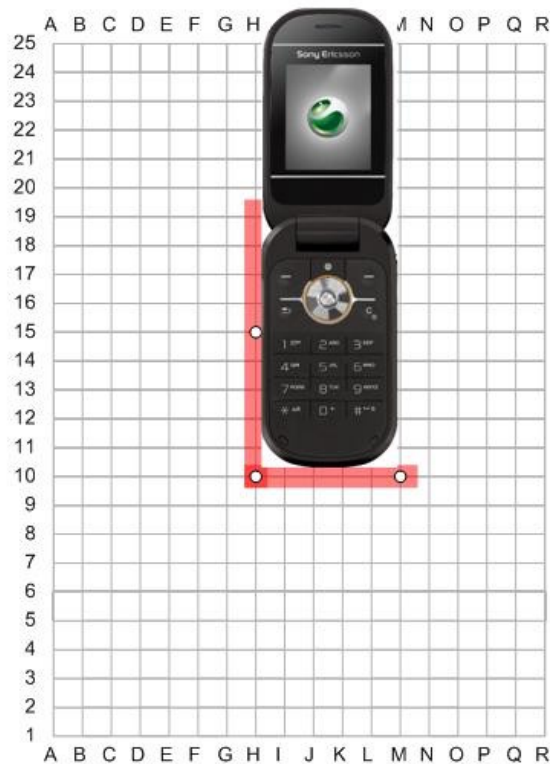

Rohde & Schwarz Shield Box and Coupler (H10)

4. Turn on the mobile and wait for registration.
5. Set up a call to the instrument or let the instrument call the MS.
6. Close the lid on the shielding box.



2.2 Audio Loopback

1. Set power level to high.
2. Activate audio loopback in the instrument.
3. Operator must acknowledge passed or failed before the test is continued.

2.3 Measurement Group ALLMEAS LCH 900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 900	

2.3.1 Sequence

Measurement	Test Limits	Unit
TX power	33 +/-4	dB
RMS Phase error	0 +/-5	deg
Rx Level	34-50	dB
Rx Quality	0-3	Units

2.4 Measurement Group ALLMEAS MCH 900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 900	

2.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units

2.5 Measurement Group ALLMEAS HCH 900

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 900	

2.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-7	dB
RMS Phase error	0 +/-5	deg

2.6 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

2.6.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units

2.7 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1800	

2.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units

2.8 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

2.8.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase error	0 +/-5	deg

2.9 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

2.9.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units

2.10 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

2.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units



2.11 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

2.11.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase error	0 +/-5	deg

2.11.2 Call Disconnect Sequence

1. Disconnect call.
2. End test.



3 Z250i/Z320i Test Sequence using a Direct Line Connection

3.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Mid	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 900	

3.1.1 Sequence

1. Initialize instrument
2. Insert a Test SIM and attach a fully charged standard battery to the mobile. It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results.
3. Connect the mobile to the RF fixture according to the picture.



4. Turn on the mobile and wait for registration.
5. Set up a call to the instrument or let the instrument call the MS.



3.2 Audio Loopback

1. Set power level to high.
2. Activate audio loopback in the instrument.
3. Operator must acknowledge passed or failed before the test is continued.

3.3 Measurement Group ALLMEAS LCH 900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 900	

3.3.1 Sequence

Measurement	Test Limits	Unit
TX power	33 +/-2	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
Rx Quality	0-3	Units

3.4 Measurement Group ALLMEAS MCH 900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 900	

3.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units



3.5 Measurement Group ALLMEAS HCH 900

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 900	

3.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-5	dB
RMS Phase error	0 +/-5	deg

3.6 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

3.6.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units

3.7 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1800	

3.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units

3.8 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

3.8.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase error	0 +/-5	deg

3.9 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

3.9.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase Error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units

3.10 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

3.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units



3.11 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1900	

3.11.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase error	0 +/-5	deg

3.11.2 Call Disconnect Sequence

1. Disconnect call.
2. End test.

4 Z250a/Z320a Test Sequence using an RF Shield Box and Coupler


4.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Mid	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 850	



4.1.1 Sequence

1. Initialize instrument
2. Insert a test-SIM and attach a fully charged standard battery to the mobile (install battery cover before testing). It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results.
3. Position the mobile in the coupler according to the picture.

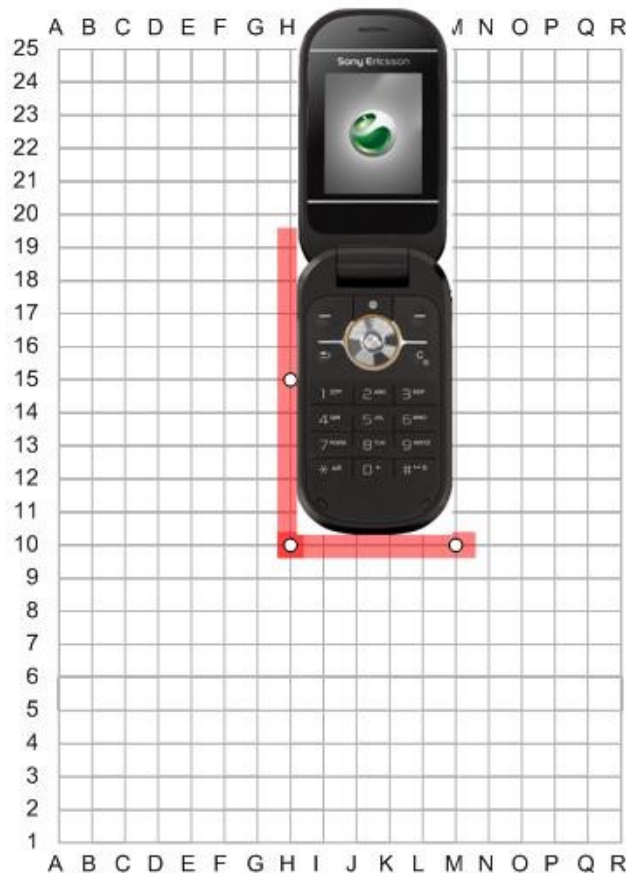

Rohde & Schwarz Shield Box and Coupler (H10)

4. Turn on the mobile and wait for registration.
5. Set up a call to the instrument or let the instrument call the MS.
6. Close the lid on the shielding box.

4.2 Audio Loopback

1. Set power level to high.
2. Activate audio loopback in the instrument.
3. Operator must acknowledge passed or failed before the test is continued.

4.3 Measurement Group ALLMEAS LCH 850

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 850	

4.3.1 Sequence

Measurement	Test Limits	Unit
TX power	29 +/-4	dB
RMS Phase error	0 +/-5	deg
Rx Level	34-50	dB
Rx Quality	0-3	Units

4.4 Measurement Group ALLMEAS MCH 850

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 850	

4.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units



4.5 Measurement Group ALLMEAS HCH 850

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 850	

4.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-7	dB
RMS Phase error	0 +/-5	deg

4.6 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

4.6.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units



4.7 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

4.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units

4.8 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1900	

4.8.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase error	0 +/-5	deg

4.9 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

4.9.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units

4.10 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1800	

4.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units



4.11 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

4.11.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase error	0 +/-5	deg

4.11.2 Call Disconnect Sequence

1. Disconnect call.
2. End test.



5 Z250a/Z320a Test Sequence using a Direct Line Connection

5.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Mid	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 850	

5.1.1 Sequence

1. Initialize instrument
2. Insert a test-SIM and attach a fully charged standard battery to the mobile. It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results.
3. Connect the mobile to the RF fixture according to the picture.



4. Turn on the mobile and wait for registration.
5. Set up a call to the instrument or let the instrument call the MS.



5.2 Audio Loopback

1. Set power level to high.
2. Activate audio loopback in the instrument.
3. Operator must acknowledge passed or failed before the test is continued.

5.3 Measurement Group ALLMEAS LCH 850

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 850	

5.3.1 Sequence

Measurement	Test Limits	Unit
TX power	29 +/-2	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
Rx Quality	0-3	Units

5.4 Measurement Group ALLMEAS MCH 850

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 850	

5.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units



5.5 Measurement Group ALLMEAS HCH 850

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 850	

5.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-5	dB
RMS Phase error	0 +/-5	deg

5.6 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

5.6.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units

5.7 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

5.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units

5.8 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1900	

5.8.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase error	0 +/-5	deg

5.9 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

5.9.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase Error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units

5.10 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1800	

5.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units



5.11 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

5.11.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase error	0 +/-5	deg

5.11.2 Call Disconnect Sequence

1. Disconnect call.
2. End Test.

6 Attenuation Factors

6.1 Z250i Loss Values for the Rohde & Schwarz RF Shield Box and Coupler

The following values shall be used when testing the Z250i in the Rohde & Schwarz RF shield box (**R&S part # 1150.1008.02**) using the Rohde & Schwarz coupler (**R&S part # 1150.0801.02**) and SEMC RF-cable (**SEMC part # RPM 119 855**). A precision type N Male to SMA Female adapter is required to connect the cable to the RF shield box.

NOTE! These values are only valid if you using the Grid Positioning Plate (R&S part number 1158.9789.00)

Band	Channel*	Attenuation	
		RX	TX
GSM 900	Low	4.76	5.26
	Mid	4.97	4.67
	High	5.83	5.14
GSM 1800	Low	12.64	16.14
	Mid	11.43	13.62
	High	11.86	13.07
GSM 1900	Low	13.93	12.58
	Mid	12.64	12.03
	High	11.43	12.24

- See Channel Allocation Table

6.2 Z250a Loss Values for the Rohde & Schwarz RF Shield Box and Coupler

The following values shall be used when testing the Z250a in the Rohde & Schwarz RF shield box (**R&S part # 1150.1008.02**) using the Rohde & Schwarz coupler (**R&S part # 1150.0801.02**) and SEMC RF-cable (**SEMC part # RPM 119 855**). A precision type N Male to SMA Female adapter is required to connect the cable to the RF shield box.

NOTE! Loss Values will be added in the near future for the Z250a Handset.

Band	Channel*	Attenuation	
		RX	TX
GSM 850	Low	5.76	10.59
	Mid	4.90	8.81
	High	7.83	6.84
GSM 1800	Low	12.93	16.27
	Mid	12.21	14.65
	High	12.07	13.63
GSM 1900	Low	14.64	12.49
	Mid	13.21	12.56
	High	11.79	12.38

- See Channel Allocation Table

6.3 Z250i/Z250a Loss Values for a Direct Line Connection

1. The following values shall be used when testing the Z250 with a Direct Line connection. The Direct Line connection shall consist of a SEMC RF-cable (**SEMC part # RPM 119 855**) and RF Probe (**SEMC RPM 854/1**).

Band	Channel*	Attenuation	
		RX	TX
GSM 850/900	ALL	0.9	0.9
GSM 1800	ALL	1.5	1.5
GSM 1900	ALL	1.5	1.5

- See Channel Allocation Table

6.4 Z320i Loss Values for the Rohde & Schwarz RF Shield Box and Coupler

The following values shall be used when testing the Z320i in the Rohde & Schwarz RF shield box (**R&S part # 1150.1008.02**) using the Rohde & Schwarz coupler (**R&S part # 1150.0801.02**) and SEMC RF-cable (**SEMC part # RPM 119 855**). A precision type N Male to SMA Female adapter is required to connect the cable to the RF shield box.

NOTE! These values are only valid if you using the Grid Positioning Plate (R&S part number 1158.9789.00)

Band	Channel*	Attenuation	
		RX	TX
GSM 900	Low	4.95	5.57
	Mid	4.70	4.34
	High	5.40	5.09
GSM 1800	Low	12.85	15.22
	Mid	12.35	14.44
	High	11.80	13.04
GSM 1900	Low	14.00	12.35
	Mid	12.45	12.15
	High	11.00	12.54

- See Channel Allocation Table

6.5 Z320a Loss Values for the Rohde & Schwarz RF Shield Box and Coupler

The following values shall be used when testing the Z320a in the Rohde & Schwarz RF shield box (**R&S part # 1150.1008.02**) using the Rohde & Schwarz coupler (**R&S part # 1150.0801.02**) and SEMC RF-cable (**SEMC part # RPM 119 855**). A precision type N Male to SMA Female adapter is required to connect the cable to the RF shield box.

NOTE! These values are only valid if you using the Grid Positioning Plate (R&S part number 1158.9789.00)

Band	Channel*	Attenuation	
		RX	TX
GSM 850	Low	5.61	11.83
	Mid	4.61	10.24
	High	7.33	8.12
GSM 1800	Low	13.21	15.56
	Mid	11.36	14.26
	High	11.43	13.55
GSM 1900	Low	14.07	12.38
	Mid	12.50	11.94
	High	10.93	12.23

- See Channel Allocation Table

6.6 Z320a/Z320i Loss Values for a Direct Line Connection

- The following values shall be used when testing the Z250a with a Direct Line connection. The Direct Line connection shall consist of a SEMC RF-cable (**SEMC part # RPM 119 855**) and RF Probe (**SEMC RPM 854/1**).

Band	Channel*	Attenuation	
		RX	TX
GSM 850/900	ALL	0.9	0.9
GSM 1800	ALL	1.5	1.5
GSM 1900	ALL	1.5	1.5

- See Channel Allocation Table



7 Revision history

Rev.	Date	Changes / Comments
A	2008-01-21	Initial Release
B	2008-05-29	Added the coupler loss values for Z250a

This document was created with Win2PDF available at <http://www.win2pdf.com>.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.
This page will not be added after purchasing Win2PDF.