



# Go/No Go Test Script Specification, Electrical

Applicable for K790, K800, K810 and K818

## Contents

<b>1... General .....</b>	<b>4</b>
1.1 About This Document.....	4
1.2 Script Requirements.....	4
1.3 Channel Allocation Table.....	5
1.4 Power Level Allocation Table.....	5
1.5 Test Limits.....	5
1.6 Attenuation Factors .....	6
1.7 Scripts.....	6
<b>2... K800/K810 Test Sequence using an RF Shield Box and Coupler .....</b>	<b>6</b>
2.1 Initializing and Call Setup .....	6
2.2 Audio Loopback .....	8
2.3 Measurement Group ALLMEAS LCH 900 .....	8
2.4 Measurement Group ALLMEAS MCH 900 .....	8
2.5 Measurement Group ALLMEAS HCH 900 .....	9
2.6 Measurement Group ALLMEAS LCH 1800.....	9
2.7 Measurement Group ALLMEAS MCH 1800.....	10
2.8 Measurement Group ALLMEAS HCH 1800 .....	10
2.9 Measurement Group ALLMEAS LCH 1900.....	10
2.10 Measurement Group ALLMEAS MCH 1900.....	11
2.11 Measurement Group ALLMEAS HCH 1900 .....	11
2.12 UMTS 2100 Low TCH Measurements .....	12
2.13 UMTS 2100 Mid TCH Measurements .....	12
2.14 UMTS 2100 High TCH Measurements.....	13
<b>3... K800/K810 Test Sequence using a Direct Line Connection .....</b>	<b>14</b>
3.1 Initializing and Call Setup .....	14
3.2 Audio Loopback .....	15
3.3 Measurement Group ALLMEAS LCH 900 .....	15
3.4 Measurement Group ALLMEAS MCH 900 .....	15
3.5 Measurement Group ALLMEAS HCH 900 .....	16
3.6 Measurement Group ALLMEAS LCH 1800.....	16
3.7 Measurement Group ALLMEAS MCH 1800.....	17
3.8 Measurement Group ALLMEAS HCH 1800 .....	17
3.9 Measurement Group ALLMEAS LCH 1900.....	18
3.10 Measurement Group ALLMEAS MCH 1900.....	18
3.11 Measurement Group ALLMEAS HCH 1900 .....	19
3.12 UMTS 2100 Low TCH Measurements .....	19
3.13 UMTS 2100 Mid TCH Measurements .....	19
3.14 UMTS 2100 High TCH Measurements.....	20
<b>4... K790c/K790i/K818 Test Sequence using an RF Shield Box and Coupler .....</b>	<b>21</b>



4.1	Initializing and Call Setup .....	21
4.2	Audio Loopback .....	22
4.3	Measurement Group ALLMEAS LCH 900 .....	23
4.4	Measurement Group ALLMEAS MCH 900 .....	23
4.5	Measurement Group ALLMEAS HCH 900 .....	23
4.6	Measurement Group ALLMEAS LCH 1800 .....	24
4.7	Measurement Group ALLMEAS MCH 1800 .....	24
4.8	Measurement Group ALLMEAS HCH 1800 .....	25
4.9	Measurement Group ALLMEAS LCH 1900 .....	25
4.10	Measurement Group ALLMEAS MCH 1900 .....	26
4.11	Measurement Group ALLMEAS HCH 1900 .....	26
<b>5...</b>	<b>K790c/K790i/K818 Test Sequence using a Direct Line Connection .....</b>	<b>28</b>
5.1	Initializing and Call Setup .....	28
5.2	Audio Loopback .....	29
5.3	Measurement Group ALLMEAS LCH 900 .....	30
5.4	Measurement Group ALLMEAS MCH 900 .....	30
5.5	Measurement Group ALLMEAS HCH 900 .....	30
5.6	Measurement Group ALLMEAS LCH 1800 .....	31
5.7	Measurement Group ALLMEAS MCH 1800 .....	31
5.8	Measurement Group ALLMEAS HCH 1800 .....	32
5.9	Measurement Group ALLMEAS LCH 1900 .....	32
5.10	Measurement Group ALLMEAS MCH 1900 .....	33
5.11	Measurement Group ALLMEAS HCH 1900 .....	33
<b>6...</b>	<b>K790a Test Sequence using an RF Shield Box and Coupler .....</b>	<b>34</b>
6.1	Initializing and Call Setup .....	34
6.2	Audio Loopback .....	36
6.3	Measurement Group ALLMEAS LCH 850 .....	36
6.4	Measurement Group ALLMEAS MCH 850 .....	36
6.5	Measurement Group ALLMEAS HCH 850 .....	37
6.6	Measurement Group ALLMEAS LCH 1900 .....	37
6.7	Measurement Group ALLMEAS MCH 1900 .....	38
6.8	Measurement Group ALLMEAS HCH 1900 .....	38
6.9	Measurement Group ALLMEAS LCH 1800 .....	38
6.10	Measurement Group ALLMEAS MCH 1800 .....	39
6.11	Measurement Group ALLMEAS HCH 1800 .....	39
<b>7...</b>	<b>K790a Test Sequence using a Direct Line Connection .....</b>	<b>41</b>
7.1	Initializing and Call Setup .....	41
7.2	Audio Loopback .....	42
7.3	Measurement Group ALLMEAS LCH 850 .....	42
7.4	Measurement Group ALLMEAS MCH 850 .....	42
7.5	Measurement Group ALLMEAS HCH 850 .....	43
7.6	Measurement Group ALLMEAS LCH 1900 .....	43
7.7	Measurement Group ALLMEAS MCH 1900 .....	44
7.8	Measurement Group ALLMEAS HCH 1900 .....	44
7.9	Measurement Group ALLMEAS LCH 1800 .....	45
7.10	Measurement Group ALLMEAS MCH 1800 .....	45
7.11	Measurement Group ALLMEAS HCH 1800 .....	46
<b>8...</b>	<b>Attenuation Factors.....</b>	<b>46</b>

8.1	Rohde & Schwarz Coupler Attenuation Values for the K800.....	47
8.2	Rohde & Schwarz Coupler Attenuation Values for the K810.....	48
8.3	Rohde & Schwarz Coupler Attenuation Values for the K790c/K790i ...	49
8.4	Rohde & Schwarz Coupler Attenuation Values for the K818.....	50
8.5	Rohde & Schwarz Coupler Attenuation Values for the K790a .....	51
8.6	Direct Line Connection Attenuation Values for the K800/K810.....	52
8.7	Direct Line Connection Attenuation Values for the K790c/K790i/K818	52
8.8	Direct Line Connection Attenuation Values for the K790a .....	53
<b>9...</b>	<b>Revision history .....</b>	<b>53</b>

# 1 General

## 1.1 About This Document

This document contains the test requirements for a 3G Quad-band (900/1800/1900/WCDMA), a GSM/EDGE tri-band (900/1800/1900 and 850/1800/900) pocket transceivers using an antenna coupler or direct line connection. These test sequences should be used as an arrival and verification test of radio functionality.

Tests are done in signaling mode, i.e. a call has been established to the test instrument. The test instrument controls the transceiver unit. RF performance is measured with an antenna coupler or the direct line connection, whichever method is selected.

## 1.2 Script Requirements

- The test should be designed so those users with little or no system expertise can perform accurate testing.
- The measurements should run automatically, though a certain amount of manual work is included (and mandatory), such as MS call setup (i.e. dialling number).
- It should be possible to print or store the measurement results.
- It should be possible to change the channels used in testing due to possible local radio interference. The ranges for these settings are specified under the *Channel Allocation Table*.
- All functions and settings should be protected in such a manner that the end-user cannot directly change them. (For example, a password or encrypted settings file.)
- The attenuation factors that should be used are stated in section 8. The test instrument must be capable of using different attenuation factors for RX and TX. It must also be possible to use various attenuation factors for different channels in each band.

**NOTE!** Any setups other than the one stated in this document must be discussed and exempted by Sony Ericsson to be approved.

## 1.3 Channel Allocation Table

Band	Ch definition	Any ARFCN of:
GSM850	Low	128-132
GSM850	Mid	187-191
GSM850	High	247-251
GSM900	Low	975-979
GSM900	Mid	36-40
GSM900	High	120-124
GSM 1800	Low	512-516
GSM 1800	Mid	697-701
GSM 1800	High	881-885
GSM1900	Low	512-516
GSM1900	Mid	658-662
GSM1900	High	806-810
WCDMA	Low	10562
WCDMA	Mid	10700
WCDMA	High	10838

## 1.4 Power Level Allocation Table

Band	PL definition	Powerlevel (PL)
GSM850/900	Lowest	19
GSM850/900	Mid	12
GSM850/900	Highest	5
GSM1800/1900	Lowest	15
GSM1800/1900	Mid	8
GSM1800/1900	Highest	0

## 1.5 Test Limits

The test limits for each measurement are specified in the Sequence Tables.

1. Since the coupler introduces higher measurement inaccuracy, some measurements may have wider limits than stated in the GSM specifications.

## 1.6 Attenuation Factors

The different scripts must be configured with the correct attenuation factors and named after the product that they are designed to test. The attenuation factors to be used are stated in section 8.

## 1.7 Scripts

General scripts for the different system/system combinations may be developed. No hand-over is necessary if not stated, however, Sony Ericsson mobiles are capable of hand-over between GSM850/1900 and GSM900/1800/WCDMA and might therefore be used to decrease test time.

# 2 K800/K810 Test Sequence using an RF Shield Box and Coupler


## 2.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Mid	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 900	



## 2.1.1 Sequence

1. Initialize instrument
2. Insert a test-USIM and attach a fully charged standard battery to the mobile. It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results.
3. Position the mobile in the coupler according to the picture.

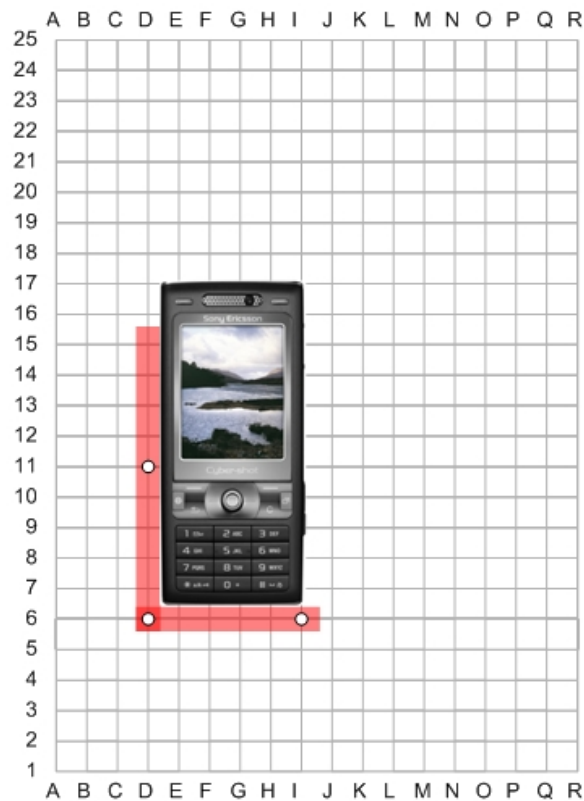

Rohde & Schwarz Shield Box and Coupler

4. Turn on the mobile and wait for registration.
5. Set up a call to the instrument or let the instrument call the MS.
6. Close the lid on the shielding box.

## 2.2 Audio Loopback

1. Set power level to high.
2. Activate audio loopback in the instrument.
3. Operator must acknowledge passed or failed before the test is continued.

## 2.3 Measurement Group ALLMEAS LCH 900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 900	

### 2.3.1 Sequence

Measurement	Test Limits	Unit
TX power	33 +/-4	dB
RMS Phase error	0 +/-5	deg
Rx Level	34-50	dB
Rx Quality	0-3	Units

## 2.4 Measurement Group ALLMEAS MCH 900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 900	

### 2.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units



## 2.5 Measurement Group ALLMEAS HCH 900

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 900	

### 2.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-7	dB
RMS Phase error	0 +/-5	deg

## 2.6 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

### 2.6.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units

## 2.7 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1800	

### 2.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units

## 2.8 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

### 2.8.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase error	0 +/-5	deg

## 2.9 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch

TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

## 2.9.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units

## 2.10 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

### 2.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units

## 2.11 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL

RF output power	-68	dBm
System	GSM 1900	

### 2.11.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase error	0 +/-5	deg

## 2.12 UMTS 2100 Low TCH Measurements

Parameter	Value	Unit
TCH	Low	Channel
Power Level	Maximum	dBm
RF out	-93	dBm

### 2.12.1 UMTS 2100 Low TCH Test Limits

Measurement	Test Limits	Unit
Tx Maximum Output Power	19 to 27	dBm
EVM	17.5 max	%
Frequency Error	-0.1 to 0.1	ppm
Tx Adjacent Channel Level Ratio +/- 5MHz	-36	dBc
Tx Adjacent Channel Level Ratio +/- 10MHz	-46	dBc

## 2.13 UMTS 2100 Mid TCH Measurements

Parameter	Value	Unit
TCH	Mid	Channel
Power Level	Maximum	dBm
RF out	-93 (* -104)	dBm

### 2.13.1 UMTS 2100 Mid TCH Test Limits

Measurement	Test Limits	Unit
Tx Maximum Output Power	19 to 27	dBm
EVM	17.5 max	%
Frequency Error	-0.1 to 0.1	ppm
Tx Adjacent Channel Level Ratio +/- 5MHz	-36	dBc
Tx Adjacent Channel Level Ratio +/- 10MHz	-46	dBc
Rx Reference Sensitivity Level* (RF out: -104)	-0.1 to 0.1	%

## 2.14 UMTS 2100 High TCH Measurements

Parameter	Value	Unit
TCH	High	Channel
Power Level	Maximum	dBm
RF out	-93	dBm

### 2.14.1 UMTS 2100 High TCH Test Limits

Measurement	Test Limits	Unit
Tx Maximum Output Power	19 to 27	dBm
EVM	17.5 max	%
Frequency Error	-0.1 to 0.1	degree
Tx Adjacent Channel Level Ratio +/- 5MHz	-36	dBc
Tx Adjacent Channel Level Ratio +/- 10MHz	-46	dBc

### 2.14.2 Call Disconnect Sequence

1. Disconnect call.
2. End test.



### 3 K800/K810 Test Sequence using a Direct Line Connection

#### 3.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Mid	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 900	

##### 3.1.1 Sequence

1. Initialize instrument
2. Insert a test-USIM and attach a fully charged standard battery to the mobile. It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results. A dummy battery can also be used.
3. Connect the mobile to the RF fixture according to the picture.



4. Turn on the mobile and wait for registration.
5. Set up a call to the instrument or let the instrument call the MS.

## 3.2 Audio Loopback

1. Set power level to high.
2. Activate audio loopback in the instrument.
3. Operator must acknowledge passed or failed before the test is continued.

## 3.3 Measurement Group ALLMEAS LCH 900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 900	

### 3.3.1 Sequence

Measurement	Test Limits	Unit
TX power	33 +/-2	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
Rx Quality	0-3	Units

## 3.4 Measurement Group ALLMEAS MCH 900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 900	

### 3.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units

## 3.5 Measurement Group ALLMEAS HCH 900

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 900	

### 3.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-5	dB
RMS Phase error	0 +/-5	deg

## 3.6 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

### 3.6.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units



### 3.7 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1800	

#### 3.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units

### 3.8 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

#### 3.8.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase error	0 +/-5	deg

### 3.9 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

#### 3.9.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase Error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units

### 3.10 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

#### 3.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units

### 3.11 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1900	

#### 3.11.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase error	0 +/-5	deg

### 3.12 UMTS 2100 Low TCH Measurements

Parameter	Value	Unit
TCH	Low	Channel
Power Level	Maximum	dBm
RF out	-93	dBm

#### 3.12.1 UMTS 2100 Low TCH Test Limits

Measurement	Test Limits	Unit
Tx Maximum Output Power	21 to 25	dBm
EVM	17.5 max	%
Frequency Error	-0.1 to 0.1	ppm
Tx Adjacent Channel Level Ratio +/- 5MHz	-36	dBc
Tx Adjacent Channel Level Ratio +/- 10MHz	-46	dBc

### 3.13 UMTS 2100 Mid TCH Measurements

Parameter	Value	Unit
TCH	Mid	Channel
Power Level	Maximum	dBm
RF out	-93 (* -104)	dBm

### 3.13.1 UMTS 2100 Mid TCH Test Limits

Measurement	Test Limits	Unit
Tx Maximum Output Power	21 to 25	dBm
EVM	17.5 max	%
Frequency Error	-0.1 to 0.1	ppm
Tx Adjacent Channel Level Ratio +/- 5MHz	-36	dBc
Tx Adjacent Channel Level Ratio +/- 10MHz	-46	dBc
Rx Reference Sensitivity Level* (RF out: -104)	-0.1 to 0.1	%

## 3.14 UMTS 2100 High TCH Measurements

Parameter	Value	Unit
TCH	High	Channel
Power Level	Maximum	dBm
RF out	-93	dBm

### 3.14.1 UMTS 2100 High TCH Test Limits

Measurement	Test Limits	Unit
Tx Maximum Output Power	21 to 25	dBm
EVM	17.5 max	%
Frequency Error	-0.1 to 0.1	degree
Tx Adjacent Channel Level Ratio +/- 5MHz	-36	dBc
Tx Adjacent Channel Level Ratio +/- 10MHz	-46	dBc

### 3.14.2 Call Disconnect Sequence

1. Disconnect call.
2. End test.

## 4 K790c/K790i/K818 Test Sequence using an RF Shield Box and Coupler


### 4.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Mid	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 900	

#### 4.1.1 Sequence



1. Initialize instrument
2. Insert a test SIM and attach a fully charged standard battery to the mobile.  
It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results.
3. Position the mobile in the coupler according to the picture.

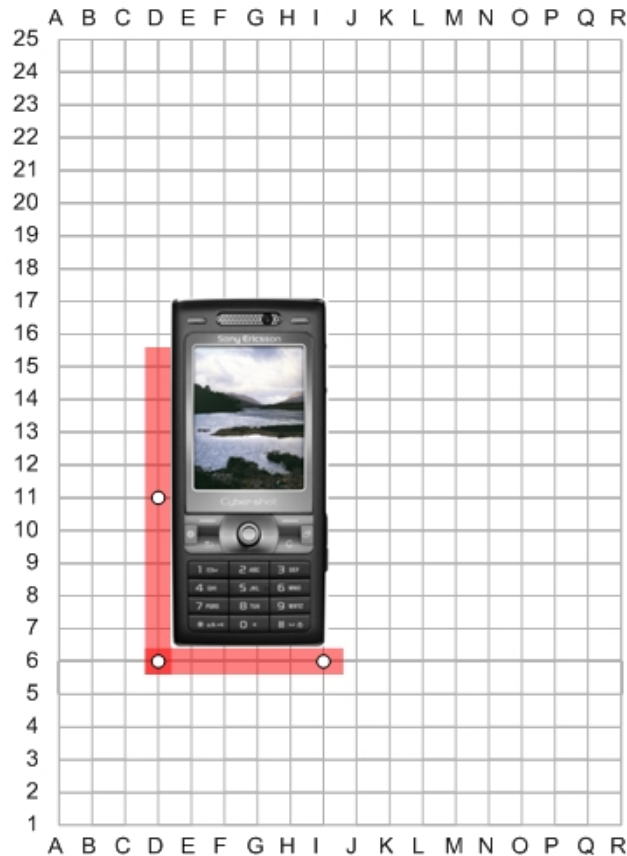

Rohde & Schwarz Shield Box and Coupler (D6)

4. Turn on the mobile and wait for registration.
5. Set up a call to the instrument or let the instrument call the MS.
6. Close the lid on the shielding box.

## 4.2 Audio Loopback

1. Set power level to high.

2. Activate audio loopback in the instrument.
3. Operator must acknowledge passed or failed before the test is continued.

### 4.3 Measurement Group ALLMEAS LCH 900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 900	

#### 4.3.1 Sequence

Measurement	Test Limits	Unit
TX power	33 +/-4	dB
RMS Phase error	0 +/-5	deg
Rx Level	34-50	dB
Rx Quality	0-3	Units

### 4.4 Measurement Group ALLMEAS MCH 900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 900	

#### 4.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units

### 4.5 Measurement Group ALLMEAS HCH 900

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 900	

#### 4.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-7	dB
RMS Phase error	0 +/-5	deg

### 4.6 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

#### 4.6.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units

### 4.7 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL



RF output power	-102	dBm
System	GSM 1800	

#### 4.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units

### 4.8 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

#### 4.8.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase error	0 +/-5	deg

### 4.9 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL

RF output power	-68	dBm
System	GSM 1900	

#### 4.9.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units

### 4.10 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

#### 4.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units

### 4.11 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	High	PL
RF output power	-68	dBm



System	GSM 1900	
--------	----------	--

#### 4.11.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase error	0 +/-5	deg

#### 4.11.2 Call Disconnect Sequence

3. Disconnect call.
4. End test.

## 5 K790c/K790i/K818 Test Sequence using a Direct Line Connection

### 5.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Mid	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 900	

#### 5.1.1 Sequence



1. Initialize instrument
2. Insert a test-SIM and attach a fully charged standard battery to the mobile. It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results. A dummy battery can also be used.
3. Attached the RF Probe to the mobile according to the picture.



4. Turn on the mobile and wait for registration.
5. Set up a call to the instrument or let the instrument call the MS.

## 5.2 Audio Loopback

1. Set power level to high.
2. Activate audio loopback in the instrument.
3. Operator must acknowledge pass or fail before the test is continued.

## 5.3 Measurement Group ALLMEAS LCH 900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 900	

### 5.3.1 Sequence

Measurement	Test Limits	Unit
TX power	33 +/-2	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
Rx Quality	0-3	Units

## 5.4 Measurement Group ALLMEAS MCH 900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 900	

### 5.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units

## 5.5 Measurement Group ALLMEAS HCH 900

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL

RF output power	-68	dBm
System	GSM 900	

### 5.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-5	dB
RMS Phase error	0 +/-5	deg

## 5.6 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

### 5.6.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units

## 5.7 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm

System	GSM 1800	
--------	----------	--

### 5.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units

## 5.8 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

### 5.8.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase error	0 +/-5	deg

## 5.9 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	



## 5.9.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase Error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units

## 5.10 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

### 5.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units

## 5.11 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1900	

### 5.11.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase error	0 +/-5	deg

### 5.11.2 Call Disconnect Sequence

1. Disconnect call.
2. End test.

## 6 K790a Test Sequence using an RF Shield Box and Coupler


### 6.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Low	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 1900	

#### 6.1.1 Sequence

1. Initialize instrument
2. Insert a test SIM and attach a fully charged standard battery to the mobile.  
It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results.

3. Position the mobile in the coupler according to the picture.

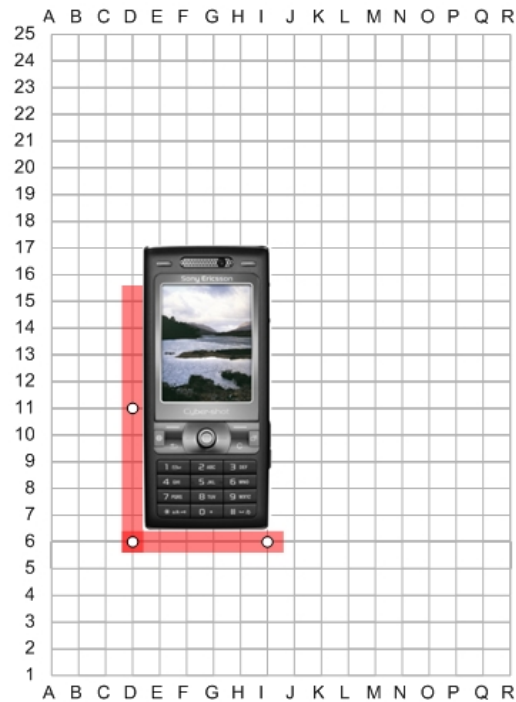

#### Rohde & Schwarz Shield Box and Coupler (D6)

4. Turn on the mobile and wait for registration.
5. Set up a call to the instrument or let the instrument call the mobile.
6. Close the lid on the shielding box.

## 6.2 Audio Loopback

4. Set power level to high.
5. Activate audio loopback in the instrument.
6. Operator must acknowledge passed or failed before the test is continued.

## 6.3 Measurement Group ALLMEAS LCH 850

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 850	

### 6.3.1 Sequence

Measurement	Test Limits	Unit
TX power	29 +/-4	dB
RMS Phase error	0 +/-5	deg
Rx Level	34-50	dB
Rx Quality	0-3	Units

## 6.4 Measurement Group ALLMEAS MCH 850

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 850	

### 6.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units

## 6.5 Measurement Group ALLMEAS HCH 850

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 850	

### 6.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-7	dB
RMS Phase error	0 +/-5	deg

## 6.6 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

### 6.6.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units

## 6.7 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

### 6.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units

## 6.8 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1900	

### 6.8.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase error	0 +/-5	deg

## 6.9 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

### 6.9.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units

## 6.10 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1800	

### 6.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units

## 6.11 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch

TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

### 6.11.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase error	0 +/-5	deg

### 6.11.2 Call Disconnect Sequence

5. Disconnect call.
6. End test.





## 7 K790a Test Sequence using a Direct Line Connection

### 7.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Low	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 1900	

#### 7.1.1 Sequence

1. Initialize instrument
2. Insert a test SIM and attach a fully charged standard battery to the mobile. It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results.
3. Connect the mobile to the RF fixture according to the picture.



4. Turn on the mobile and wait for registration.
5. Set up a call to the instrument or let the instrument call the mobile.

## 7.2 Audio Loopback

1. Set power level to high.
2. Activate audio loopback in the instrument.
3. Operator must acknowledge passed or failed before the test is continued.

## 7.3 Measurement Group ALLMEAS LCH 850

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 850	

### 7.3.1 Sequence

Measurement	Test Limits	Unit
TX power	29 +/-2	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
Rx Quality	0-3	Units

## 7.4 Measurement Group ALLMEAS MCH 850

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 850	

### 7.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units

## 7.5 Measurement Group ALLMEAS HCH 850

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 850	

### 7.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-5	dB
RMS Phase error	0 +/-5	deg

## 7.6 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

### 7.6.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units

## 7.7 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

### 7.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units

## 7.8 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1900	

### 7.8.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase error	0 +/-5	deg

## 7.9 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

### 7.9.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase Error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units

## 7.10 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1800	

### 7.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units

## 7.11 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

### 7.11.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase error	0 +/-5	deg

### 7.11.2 Call Disconnect Sequence

1. Disconnect call.
2. End test.

## 8 Attenuation Factors

## 8.1 Rohde & Schwarz Coupler Attenuation Values for the K800

The following values shall be used when testing the K800 in the Rohde & Schwarz RF shield box (**R&S part # 1150.1008.02**) using the Rohde & Schwarz coupler (**R&S part # 1150.0801.02**) and SEMC RF-cable (**SEMC part # RPM 119 855**). A precision type N Male to SMA Female adapter is required to connect the cable to the RF shield box.

**NOTE!** These values are only valid if you are using the Grid Positioning Plate (R&S part number 1158.9789.00)

Band	Channel*	Attenuation	
		RX	TX
GSM 900	Low	7.80	11.06
	Mid	9.80	10.01
	High	13.30	7.35
GSM 1800	Low	6.30	9.17
	Mid	7.05	9.67
	High	6.80	8.26
GSM 1900	Low	6.80	5.62
	Mid	7.80	4.47
	High	9.55	5.02
WCDMA	Low	13.25	10.90
	Mid	14.50	10.72
	High	18.00	11.12

\* See Channel Allocation Table

## 8.2 Rohde & Schwarz Coupler Attenuation Values for the K810

The following values shall be used when testing the K810 in the Rohde & Schwarz RF shield box (**R&S part # 1150.1008.02**) using the Rohde & Schwarz coupler (**R&S part # 1150.0801.02**) and SEMC RF-cable (**SEMC part # RPM 119 855**). A precision type N Male to SMA Female adapter is required to connect the cable to the RF shield box.

**NOTE!** These values are only valid if you are using the Grid Positioning Plate (R&S part number 1158.9789.00)

Band	Channel*	Attenuation	
		RX	TX
GSM 900	Low	9.75	11.19
	Mid	12.50	8.43
	High	12.60	6.42
GSM 1800	Low	6.25	10.34
	Mid	6.60	9.68
	High	5.20	9.08
GSM 1900	Low	6.70	5.35
	Mid	8.20	3.77
	High	9.60	4.48
WCDMA	Low	14.05	6.18
	Mid	17.10	8.08
	High	20.10	9.19

\* See Channel Allocation Table



### 8.3 Rohde & Schwarz Coupler Attenuation Values for the K790c/K790i

The following values shall be used when testing the K790c/K790i in the Rohde & Schwarz RF shield box (**R&S part # 1150.1008.02**) using the Rohde & Schwarz coupler (**R&S part # 1150.0801.02**) and SEMC RF-cable (**SEMC part # RPM 119 855**). A precision type N Male to SMA Female adapter is required to connect the cable to the RF shield box.

**NOTE!** These values are only valid if you are using the Grid Positioning Plate (R&S part number 1158.9789.00)

Band	Channel*	Attenuation	
		RX	TX
GSM 900	Low	8.72	11.16
	Mid	10.13	7.99
	High	10.80	7.67
GSM 1800	Low	6.89	10.66
	Mid	6.80	9.88
	High	6.05	7.50
GSM 1900	Low	8.47	6.73
	Mid	10.97	6.48
	High	11.88	8.26

\* See Channel Allocation Table

## 8.4 Rohde & Schwarz Coupler Attenuation Values for the K818

The following values shall be used when testing the K818 in the Rohde & Schwarz RF shield box (**R&S part # 1150.1008.02**) using the Rohde & Schwarz coupler (**R&S part # 1150.0801.02**) and SEMC RF-cable (**SEMC part # RPM 119 855**). A precision type N Male to SMA Female adapter is required to connect the cable to the RF shield box.

**NOTE!** These values are only valid if you are using the Grid Positioning Plate (R&S part number 1158.9789.00)

Band	Channel*	Attenuation	
		RX	TX
GSM 900	Low	8.75	10.55
	Mid	12.17	7.36
	High	11.93	5.45
GSM 1800	Low	6.25	9.63
	Mid	6.27	8.82
	High	5.86	7.88
GSM 1900	Low	6.01	4.75
	Mid	8.20	4.44
	High	9.30	4.84

\* See Channel Allocation Table

## 8.5 Rohde & Schwarz Coupler Attenuation Values for the K790a

The following values shall be used when testing the K790a in the Rohde & Schwarz RF shield box (**R&S part # 1150.1008.02**) using the Rohde & Schwarz coupler (**R&S part # 1150.0801.02**) and SEMC RF-cable (**SEMC part # RPM 119 855**). A precision type N Male to SMA Female adapter is required to connect the cable to the RF shield box.

**NOTE!** These values are only valid if you are using the Grid Positioning Plate (R&S part number 1158.9789.00)

Band	Channel*	Attenuation	
		RX	TX
GSM 850	Low	14.18	14.52
	Mid	13.93	14.08
	High	11.68	14.17
GSM 1800	Low	6.43	11.11
	Mid	6.93	9.69
	High	6.05	7.22
GSM 1900	Low	8.68	6.49
	Mid	10.43	6.11
	High	11.68	8.25

\* See Channel Allocation Table

## 8.6 Direct Line Connection Attenuation Values for the K800/K810

The following values shall be used when testing the K800/K810 with a Direct Line connection. The Direct Line connection shall consist of a SEMC RF-cable (**SEMC part # RPM 119 855**), RF Probe (**SEMC part # RNT 403 303/001**) and RF Fixture (**SEMC part # NTZ 112 570**).

Band	Channel*	Attenuation	
		RX	TX
GSM 900	ALL	0.8	0.8
GSM 1800	ALL	1.3	1.3
GSM 1900	ALL	1.3	1.3
WCDMA	ALL	1.5	1.5

\* See Channel Allocation Table

## 8.7 Direct Line Connection Attenuation Values for the K790c/K790i/K818

The following values shall be used when testing the K790c/K790i with a Direct Line connection. The Direct Line connection shall consist of a SEMC RF-cable (**SEMC part # RPM 119 855**), RF Probe (**SEMC part # RNT 403 303/001**) and RF Fixture (**SEMC part # NTZ 112 570**).

Band	Channel*	Attenuation	
		RX	TX
GSM 900	ALL	0.8	0.8
GSM 1800	ALL	1.3	1.3
GSM 1900	ALL	1.3	1.3
WCDMA	ALL	1.5	1.5

\* See Channel Allocation Table

## 8.8 Direct Line Connection Attenuation Values for the K790a

The following values shall be used when testing the K790a with a Direct Line connection. The Direct Line connection shall consist of a SEMC RF-cable (**SEMC part # RPM 119 855**), RF Probe (**SEMC part # RNT 403 303/001**) and RF Fixture (**SEMC part # NTZ 112 570**).

Band	Channel*	Attenuation	
		RX	TX
GSM 900	ALL	0.8	0.8
GSM 1800	ALL	1.3	1.3
GSM 1900	ALL	1.3	1.3
WCDMA	ALL	1.5	1.5

\* See Channel Allocation Table

## 9 Revision history

Rev.	Date	Changes / Comments
A	2006-06-26	Initial Release
B	2006-07-10	Added support for the K790
C	2006-08-09	Added the K800 loss values for the R&S coupler
D	2007-05-01	Added loss values for the K790 and add support for the K810
E	2007-08-05	Added support for the K818
F	2007-11-05	Updated the WCDMA test routine.